

KIT PACKAGING ALERT

These instructions include a template using a 11" x 17" size paper.

BEFORE PRINTING THESE INSTRUCTIONS TO PACKAGE IN KITS, YOU MUST SET YOUR PRINT SETUP DIALOG TO PRINT THE CORRECT SIZE PAPER

Failure to do so will result in not printing the correct size template.

In the Print Set up Dialog Box

Under Page Handling:

- Uncheck Page Scaling Box
- Uncheck Auto Rotate and Center Box
- Check the Choose Paper Source by PDF Size Box, and click OK

DO NOT INCLUDE THIS PAGE WITH INSTRUCTIONS

Contact Technical Publications if you have any questions

PRO RIDE WIND DEFLECTOR KIT



POLARIS
The Way Out.®

KIT P/N 2878723

Application

All Polaris PRO Ride Snowmobiles

Before you begin, read these instructions twice and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

Kit Includes:

Qty.	Part Description	Part No
1	Wind Deflector, LH	2634134
1	Wind Deflector, RH	2634135
1	Template	-----
2	Alcohol Pads	-----
1	Instructions with template	9923242


You will need to Supply:

Tape Hand Held Propane Torch (if needed)

IMPORTANT: For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence as shown on the attached instructions.


INSTALLATION INSTRUCTIONS

1. Remove side panels. Bring side panels and wind deflectors into a warm or heated area until they are sufficiently warmed. They must be at room temperature for proper installation.
2. Thoroughly clean area on both side panels where the wind deflectors will be installed with the supplied alcohol pads. Figure 1.
3. Determine if the side panels are painted or are an in-mold color. If any questions arise during any part of the process, please contact your nearest authorized Polaris dealer.
4. If the side panels are painted, skip to Step 6.
5. Using a hand held propane torch, flame treat the surface of the side panel where the wind deflectors will be installed by moving the torch over the surface, using a back and forth motion. Do not hold the torch too close to the side panel surface to prevent damage.

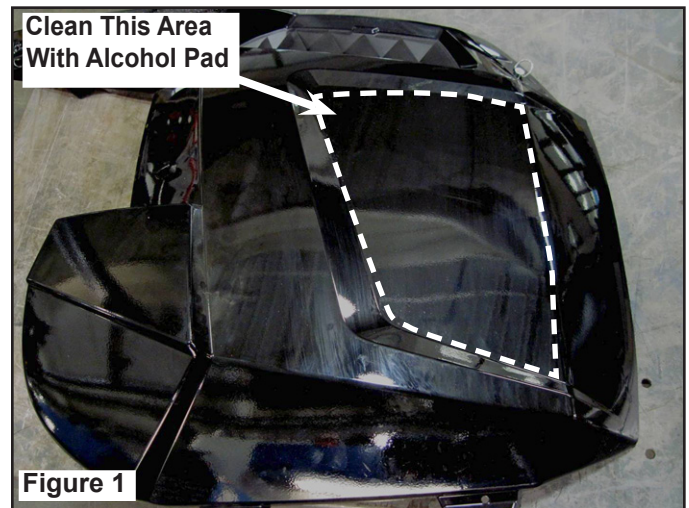

WARNING: Perform this procedure in a well ventilated area, away from gasoline or other flammable materials. Be sure the area to be flame treated is clean and free of gasoline or flammable residue.


6. Install template onto side panel and secure with tape. Figure 2. Template will be reused for the other side panel.

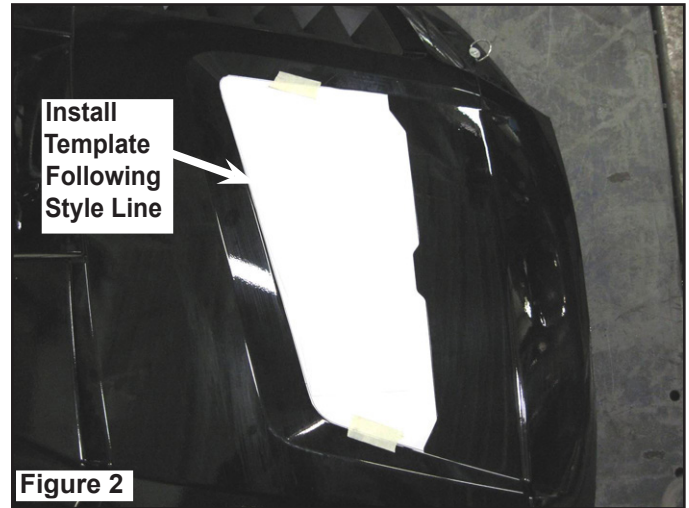


7. Remove backing tape from wind deflector (one deflector at a time) and carefully line up the wind deflector with the edge of the template. Figure 3.

CAUTION: Use caution when lining up the wind deflector as the adhesive is very sticky and may not be removable without damage once attached to side panel.

8. Firmly press the wind deflector to the side panel working from top to bottom and repeat numerous times until deflector is firmly in place. Putting pressure on the part for 30 seconds will help firmly adhere the adhesive to the side panel.
6. Repeat Steps 1 – 8 for the other side panel using the opposite side of the template.
7. Ideally keep side panels in a warm area for 2-5 hours to allow wind deflector adhesive to cure to the side panels.
8. Reinstall side panels to vehicle.

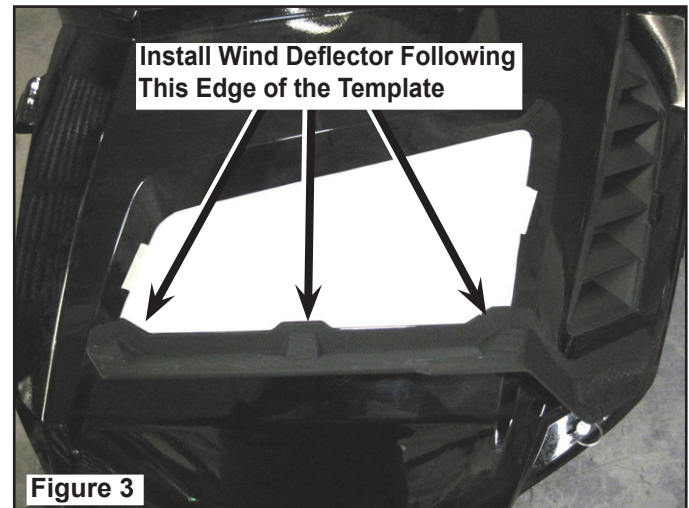

Measure the template after printing to be sure the template has printed correctly

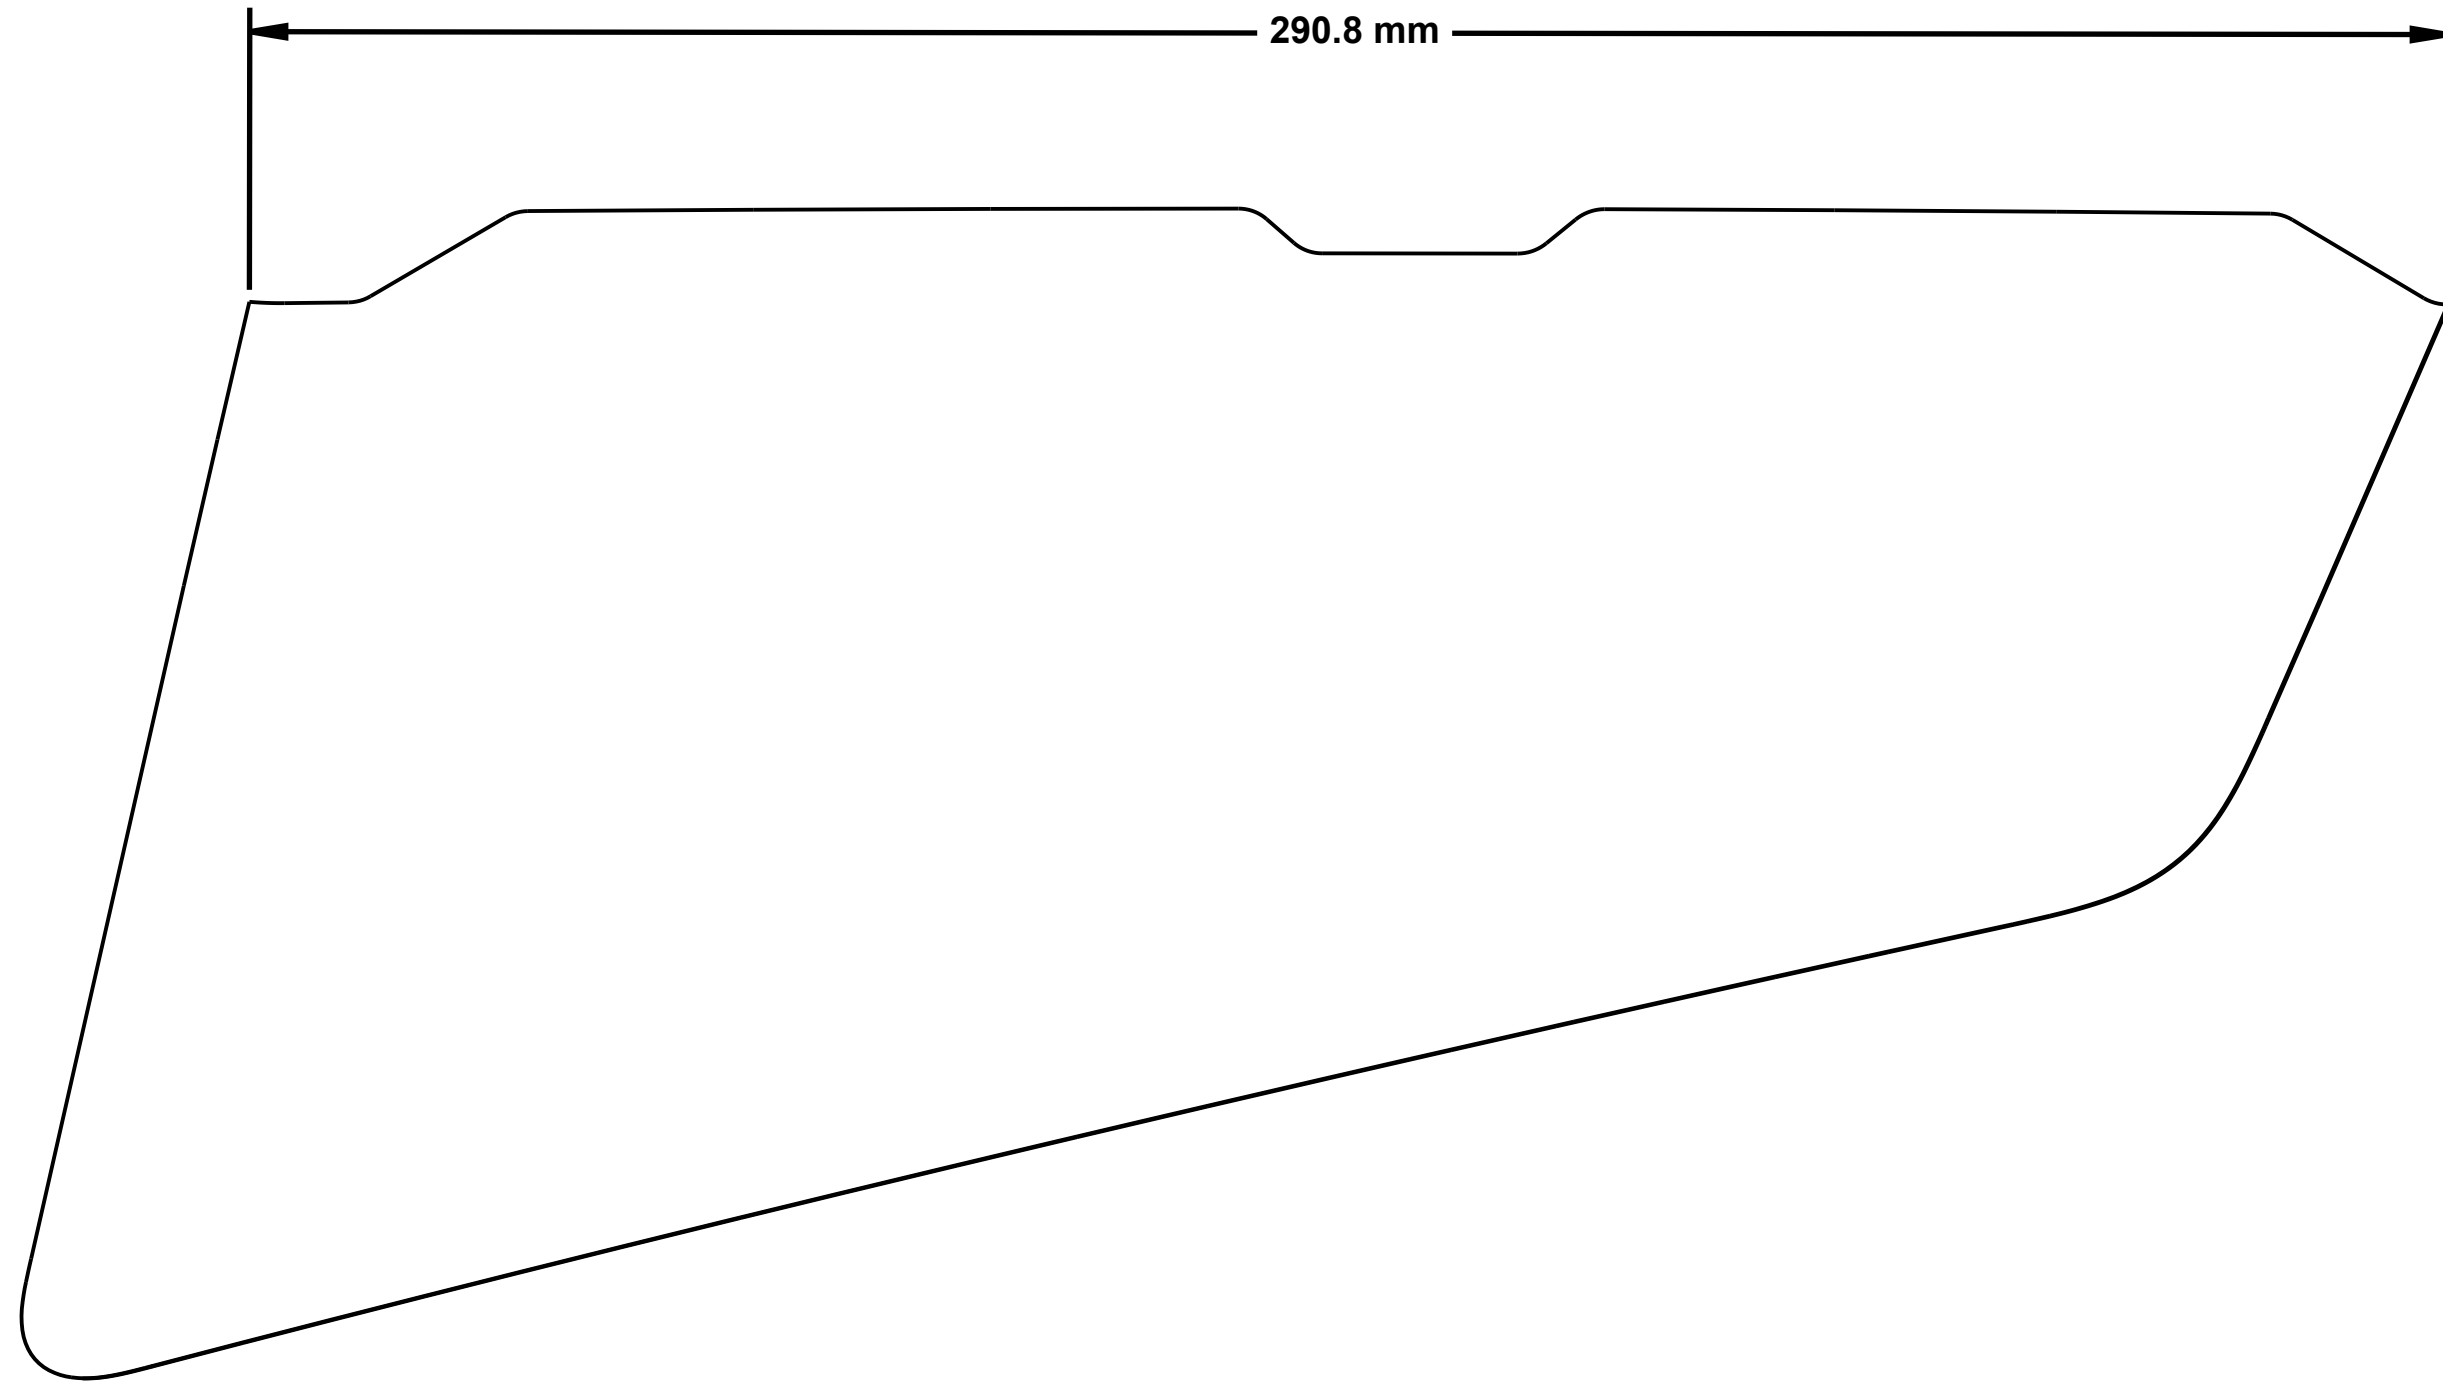

This Template Should be used for Both Left hand and Right Hand Side Panels