

SNOWBIKE QUICK COVER



P/N 2883649

APPLICATION

Verify accessory fitment at Timbersled.com.

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:



REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Quick Cover	2883649
	1	Instructions	9929040

TOOLS REQUIRED

None

IMPORTANT

Your Snowbike Quick Cover is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 6 minutes

INSTALLATION INSTRUCTIONS


CAUTION

BEFORE STARTING INSTALLATION, always ensure vehicle is on a flat stable surface and is properly secured to avoid accidental tipping or other movement to prevent personal injury and/or damage to equipment. If applicable, turn key to "OFF" position and remove from vehicle.

WARNING

If transporting the vehicle on a non-enclosed trailer ensure that the cover is properly secured to the vehicle. Ensure that fuel access port is zipped closed to minimize the amount of extra material exposed. Failure to comply may allow airflow, vibration, or other factors to cause damage to the cover or vehicle and may cause the cover to separate from the vehicle causing an accident resulting in personal injury or death.

1. Before installing the cover onto the vehicle, secure the cover hold down hooks (A) into the sewn-in hook loops on the cover to prevent the hooks from damaging the vehicle while installing. See image below.

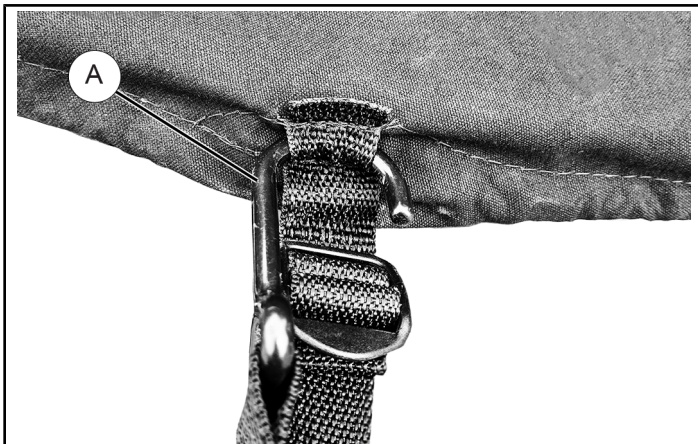


2. Place cover over front fender of snow bike.




3. Next, move cover over the handlebars of the snow bike working over one side of the handlebar at a time.
4. Drape the remaining portion of the cover over the snow bike fuel tank and seat.




5. Once the cover is fitted to the vehicle, secure the front spindle hook strap ⑥ to the lower-most edge of the front spindle plate as shown.

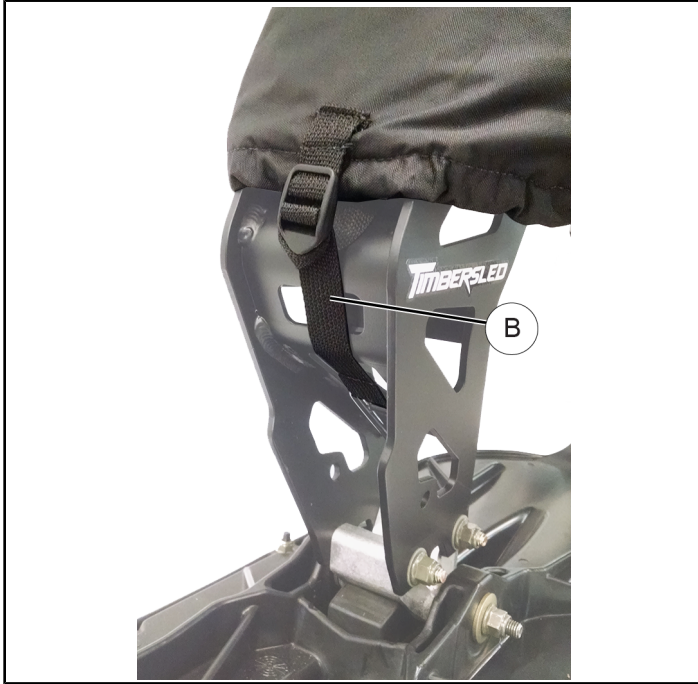

6. Secure the hook and loop cover strap ⑦ in between the front forks/spindle and the snow bike chassis as shown.

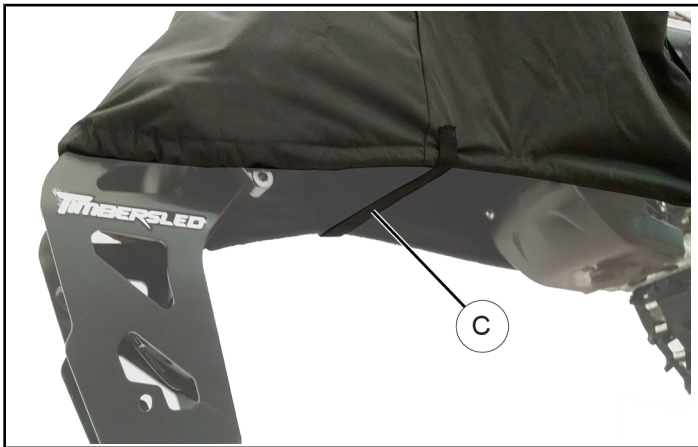

7. Next, run the lower side tensioning strap back around the foot peg of the snow bike and back up to the female half of the cover's buckle. Tighten strap to reduce excess loose material.

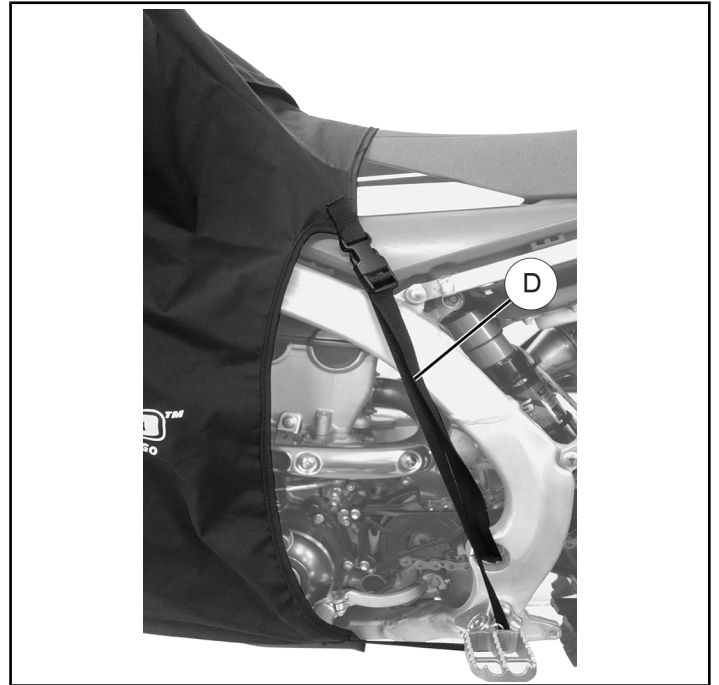

8. Verify that the fuel access port has been zipped closed and readjust all straps as necessary to ensure there is no excess loose fabric.

FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

FEEDBACK FORM

