



SIDE VIEW MIRROR INSTALL INSTRUCTIONS (A22UM484)

NOTE: ALL 5MM BOLTS RECOMMENDED TIGHTEN TO 7FT. LBS.




1

Remove mirrors from packaging and place the rubber clamp bushing appropriate for your cage tube size in the clamp.



2

With open side facing forward (allows for windshield), Position the mirrors in desired location on A-Pillar of cage and tighten.

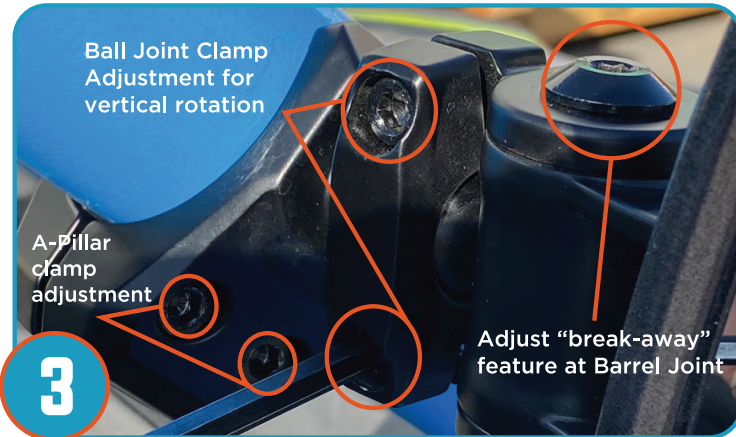

3

Loosen ball joint clamp, adjust vertical rotation as shown. Once desired position is achieved, tighten all Bolts to secure, then adjust the tightness of the break-away feature and repeat for opposite side mirror.



**OPTIONAL
CUBE LIGHT
MOUNTING BRACKETS
INCLUDED**


- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
- **Always** wear and use proper safety equipment when using any Pro Armor product.
- **Improper** use of directions and/or product can result in injury to yourself or damage to your vehicle.
- **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.
- **Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.**
- If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.

WARNING

SIDE VIEW MIRROR REPLACEMENT PARTS (A22UM484)

28 BEZEL COLOR OPTIONS

Army Green - A22UM485AG
 Avalanche Gray - A22UM485AVG
 Black - A22UM485BL
 Blue Slate - A22UM485BS
 Ghost Gray - A22UM485GG
 Gold Matte Metlalic -
 A22UM485GMM
 Lifted Lime - A22UM485LL
 Lime Squeeze - A22UM485LSQ
 Matte Black - A22UM485MB
 Military Tan - A22UM485MT
 Matte White - A22UM485MW
 Orange Madness - A22UM485OM
 Orange - A22UM485OR
 Orange Burst - A22UM485ORB
 Orange Rust Metallic -
 A22UM485ORM
 Polaris Blue - A22UM485PB
 Performance Red - A22UM485PR
 Red - A22UM485RD
 Sky Blue - A22UM485SB
 Stealth Gray - A22UM485SG
 Sparkle Silver Metallic -
 A22UM485SSM
 Super Graphite - A22UM485SUG
 Speed Yellow - A22UM485SY
 Titanium Metallic - A22UM485TM
 Titanium Matte Metallic -
 A22UM485TMM
 Turbo Silver - A22UM485TS
 White - A22UM485WH
 Zenith Blue - A22UM485ZB

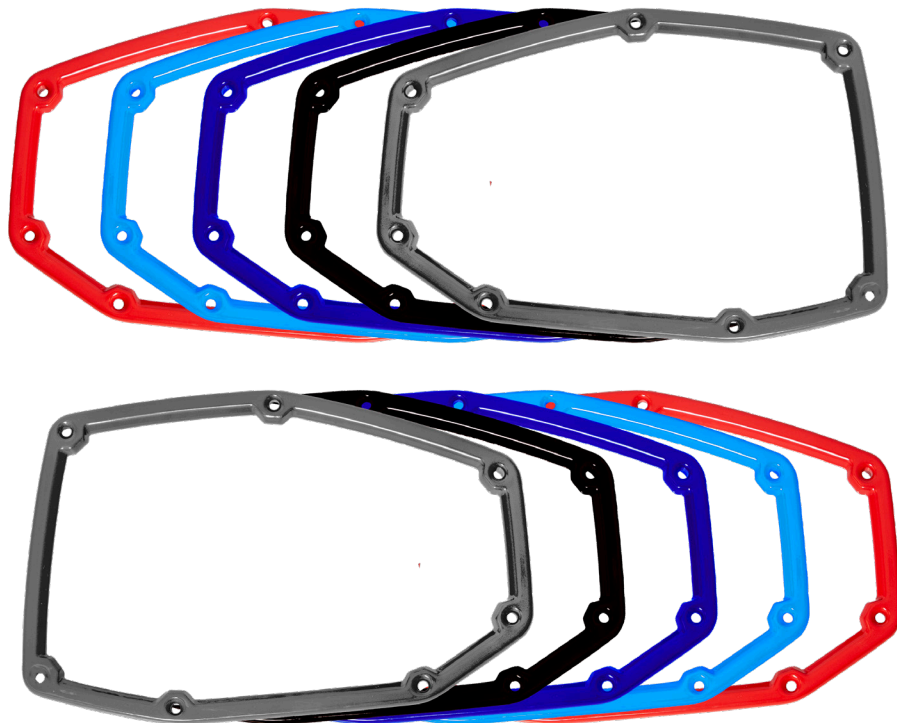

SERVICE KIT OPTIONS:

Side View Mirror Replacement Glass Kit (SKA22UM484A)

- o A22UM484-03 - Left Side Glass (QTY 1)
- o A22UM484-04 - Right Side Glass (QTY 1)
- o A22UM484-24 - Gasket (QTY 2)

Replacement Bezel Screws (SKA22UM484B)

- o HDWB0352 - BOLT, M3 X .5 X 10MM (QTY 14)

Replacement Tube Clamp Kit (SKA22UM484C)

- o A22UM484-11 - TUBE CLAMP - BALL (QTY 1)
- o A22UM484-12 - TUBE CLAMP - ARM (QTY 1)
- o A22UM484-08 - Tube Clamp Pad B - 1.875 Diameter (QTY 1)
- o A22UM484-06 - Tube Clamp Pad B - 1.75 Diameter (QTY 1)
- o A22UM484-10 - Tube Clamp Pad B - 2.00 Diameter (QTY 1)
- o A22UM484-05 - Tube Clamp Pad A - 1.75 Diameter (QTY 1)
- o A22UM484-07 - Tube Clamp Pad A - 1.875 Diameter (QTY 1)
- o A22UM484-09 - Tube Clamp Pad A - 2.00 Diameter (QTY 1)
- o HDWB0354 - BOLT, M6 X 1.0 X 40MM (QTY 2)
- o HDWN0066 - NUT, M6 X 1.0 NYLOC (QTY 2)