



## XP/XP4 1000 Front Stock Door Knee Pads (P141054 )

### Installation Instructions

FIGURE #1

#### Installation Instructions:

1. Remove the four(4) factory torx head bolts shown in Figure #1.
2. Remove the padding from the inside of the Door Bags (SEE FIG. 2) and place over the inner side of the door like shown in Figure #4. Re-install the factory hardware through the door bag and into the door (SEE FIG. 3).
3. Repeat steps for opposite side.
4. Once both sides are installed with the factory hardware, insert the padding back into the door bags and close the Velcro on them so they are secure like how they were when you received them (SEE FIG. 4).




FIGURE #3

**\*\*NOTE:** a shallow torx socket or hand angle torx would work the best because of the tight fit when installing and removing the factory hardware.

FIGURE #2



FIGURE #4

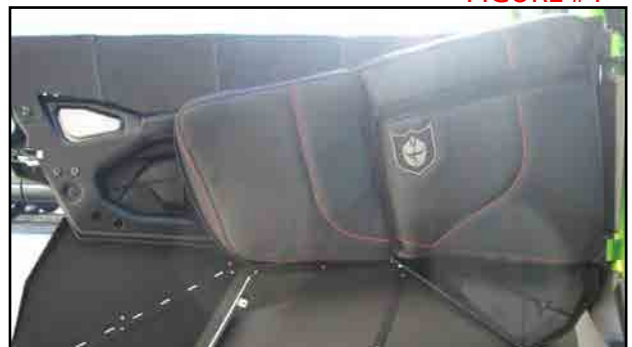

### WARNING

Please read: This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained. Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.

For further information on installation instructions and warnings please visit our website [WWW.PROARMOR.COM](http://WWW.PROARMOR.COM) or contact customer service at 1-888-31-ARMOR