



HARDWARE KIT:
1- WINDSHIELD (FRONT OR REAR)
5- HALF CLAMPS
5- NYLOC NUTS
5- 16MM BOLTS
4- 12MM BOLTS

TOOLS REQUIRED:
» 4MM ALLEN SOCKET
» 10MM SOCKET
» T40 TORX FOR INTAKE COVERS IF YOU HAVE A TURBO CAR

Rear WindShield Instructions (P141W461,P144W461)



Using Included half clamps, hand tighten 3 clamps to interior facing side of solid lower panel component and 3 for the upper windshield, for ease of install.




Position the rear windshield.



Using included half clamps secure the upper windshield to the cage.



Turbo Models ONLY - remove the Intake covers (2 Bolts for each). *At completion of install replace Intake covers on vehicle.

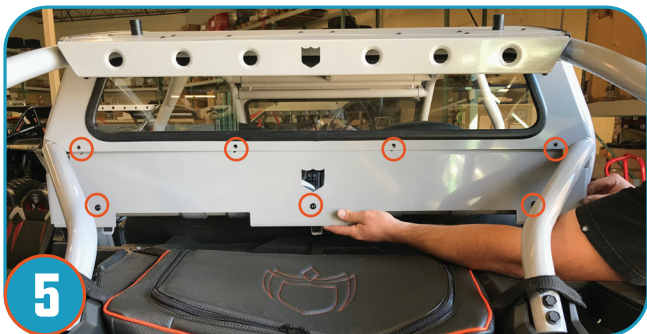

Position the lower panel so the lower panel slides behind the upper panel and secure with 4mm allen bolts (7). Torque down all bolts securing half clamps firmly to cage.



⚠ WARNING

- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
 - **Always** wear and use proper safety equipment when using any Pro Armor product.
 - Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.
 - **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.
- Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.**
- If you have questions about your installation or are unable to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.