



**HARDWARE KIT:**  
1- LOWER & UPPER CLAMP ASSEMBLY (4)  
2- DRIVER & PASSENGER LATCH PLATE  
3- BOLT, M6 X 16MM BUTT  
HEAD FLANGE (12)

**TOOLS REQUIRED:**  
» TORX 40MM SOCKET  
» TORX 25MM SOCKET  
» TORX 30MM SOCKET  
» 4MM ALLEN WRENCH  
» RATCHET

## 900 Trail Doors Instructions (P152D002)

\*\*\*Do not discard stock hardware or door latch assembly! You will be re-using them on your new trail doors.\*\*\*



1

First take off the stock door with a t40 torx socket and ratchet. (3 bolts)



2

Pull the cover off the stock door by removing the 6 - t25 bolts.



3

Remove the paddle latch from the door by removing the 2 - t30 bolts.



4

Install the paddle latch on your new Pro Armor trail doors using the provided latch plate with the t30 bolts that you removed from the previous step & 3-M6 bolts in hardware kit.



5

Install the new trail door on to the car with the 3 t40 bolts that you removed in the first step.



6

With the 3 bolts snug align the door so that it opens and closes smoothly. Make sure it latches. Then tighten the 3 t40 bolts.




## 900 Trail Doors Instructions (P152D002)



There is also adjustment in the latch plate assembly. You can adjust this with the 3 m6 bolts using a 4mm Allen wrench.



Next put on the quarter panel assembly with the hardware that came with your doors. (2 half clamps and 3 6mm bolts) Tighten with a 4mm Allen wrench.

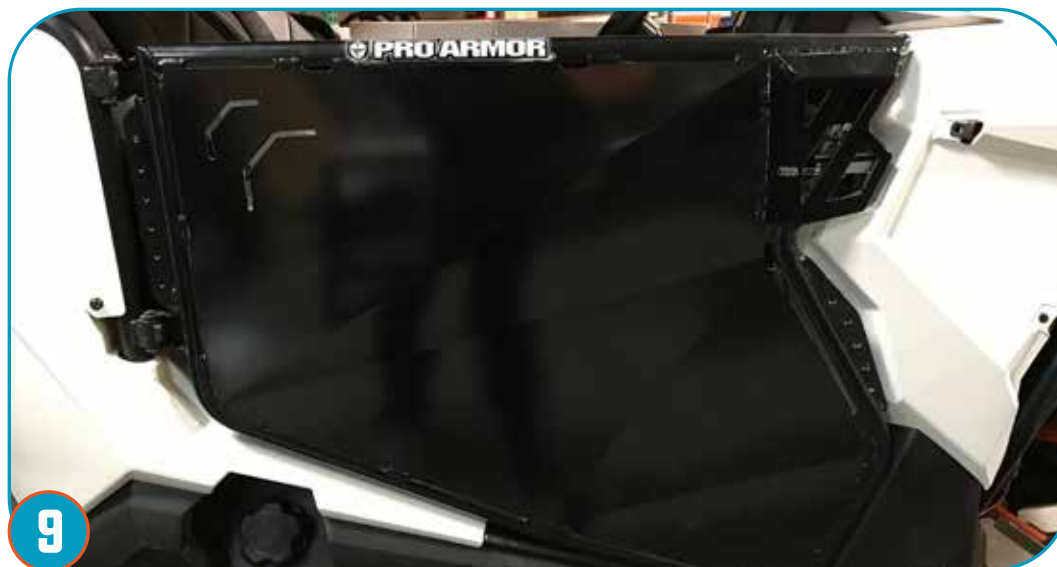

Now double check all hardware so that it is fastened tightly and correctly. Repeat these steps for opposite door.



### ⚠ WARNING

- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
- **Always** wear and use proper safety equipment when using any Pro Armor product.
- Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.
- **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.
- **Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.**
- If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.