

PRO ARMOR
EVERY RIDE HAS A STORY



2015 Polaris RZR 900S Front A-Arm Guards (P159020)

Installation Instructions





WARNING

Please read: This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained. Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.

NOTE: Removal of wheel is not necessary, but will make installation easier.

- Using a T27 Torx bit, remove the OEM plastic guard.

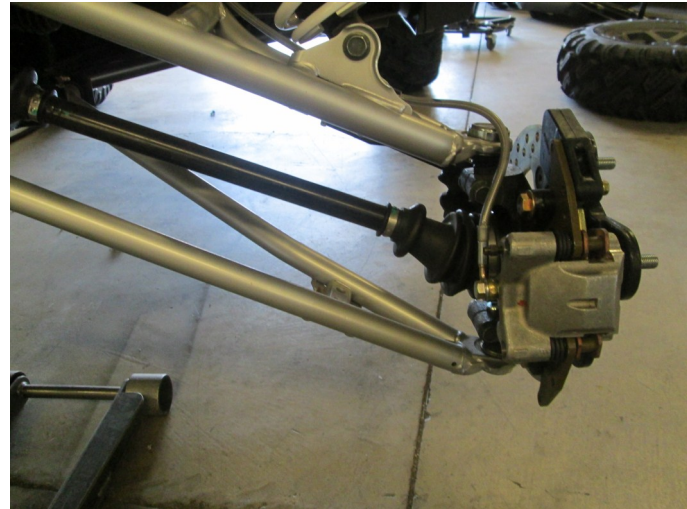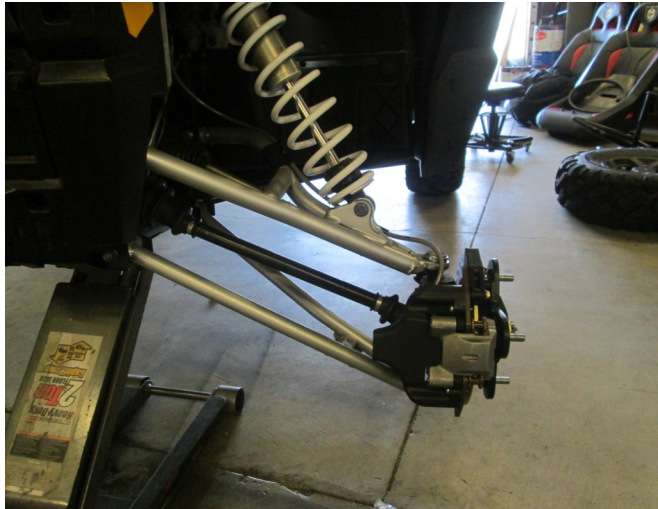

- Place a-arm guard on a-arm and loosely install mounting hardware as shown. Adjust a-arm guard to ensure best fitment. Then, tighten down all hardware.



HARDWARE KIT:

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	HDWB0117	BOLT, M6 X 1.00 X 16MM FLAT HEAD BOLT	10
2	P159020-03	LONG MOUNTING BRACKET ASSEMBLY	4
3	P159020-05	SHORT MOUNTING BRACKET	2

IMPORTANT

Removal of OEM plastic guard is required to install PROARMOR A-ARM Guard. User may opt to trim OEM plastic guard to fit, however, do so at your own risk. PROARMOR will not be liable for any damage to vehicle caused by improper installation.

For further information on installation instructions and warnings please visit our website WWW.PROARMOR.COM or contact customer service at 1-888-31-ARMOR