

PRO ARMOR



2015 Polaris RZR 900S Rear A-Arm Guards (P159024)


Installation Instructions



WARNING

Please read: This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. *The user assumes that risk.* The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained. **Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.**

- Place rear of car on jackstands and remove wheels.
- Remove the 15mm lower coilover bolt and nut.

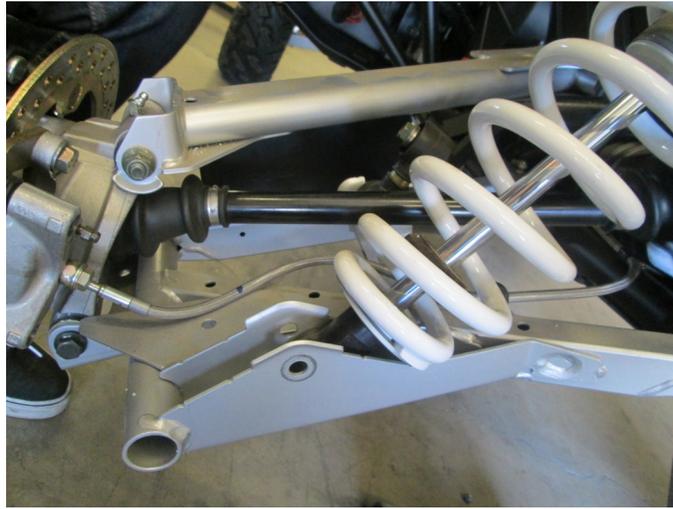

- Place a-arm guard on a-arm and loosely install mounting hardware, including the 15mm lower coilover bolt and nut as shown. Adjust a-arm guard to ensure best fitment. Then, tighten down all hardware.



HARDWARE KIT:

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	P159024-03	MOUNTING BRACKET ASSEMBLY	6
2	HDWB0117	BOLT, M6 X 1.00 X 16MM FLAT HEAD BOLT	12

For further information on installation instructions and warnings please visit our website WWW.PROARMOR.COM or contact customer service at 1-888-31-ARMOR