



2015 Polaris RZR 900S Lower Door Inserts (P159210)

Installation Instructions

WARNING

Please read: This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained. Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.

▲ WARNING

If you have questions about your installation, are unable able to complete installation, or your door is not working correctly contact Pro Armor Customer Service or have an authorized dealer or trained technicians inspect your installation ProArmor recommends you do not use your UTV if installation of the Door is incomplete

Pro Armor Door Inserts are designed to work with the seat belt and other safety features provided by the manufacturer, along with proper preparation and responsible driving from the driver ProArmor recommends you follow all manufacturers' instructions when preparing to ride and during operation

If you have any questions contact us at 1-888-312-7667 or WWW.PROARMOR.COM



▲ WARNING

Improper Use of Off-Highway Vehicles Can Cause Severe Injury or Death

Be Prepared

- Fasten seat belts.
- Wear an approved helmet and protective gear.

- Each rider must be able to sit with back against seat, feet flat on floor [and foot rests], and hands on steering wheel or handhold[s], [where equipped]. Stay completely inside the vehicle.

Be Sure Riders Pay Attention and Plan Ahead

If you think or feel the vehicle may tip or roll, reduce your risk to injury:

- Keep a firm grip on the steering wheel or handholds and brace yourself.
- Do not put any part of your body outside of the vehicle for any reason.

NOTICE

Due to the production variances and differing conditions of the frame, door adjustments may be necessary to avoid rubbing and proper fit. Ensure proper fit before tightening hardware and continuing with installation! If adjustment is necessary, confirm all mounting points are secured

NOTE: Drill, 1/2", & 1/4" drill bit needed for install.


Installation Instructions:

1. Make sure stock door opens and closes smoothly before proceeding.



2. Using a drill and a 1/2" drill bit, drill out the lower two holes shown in the pictures below.


3. Insert rubber plug-in nut into each hole.

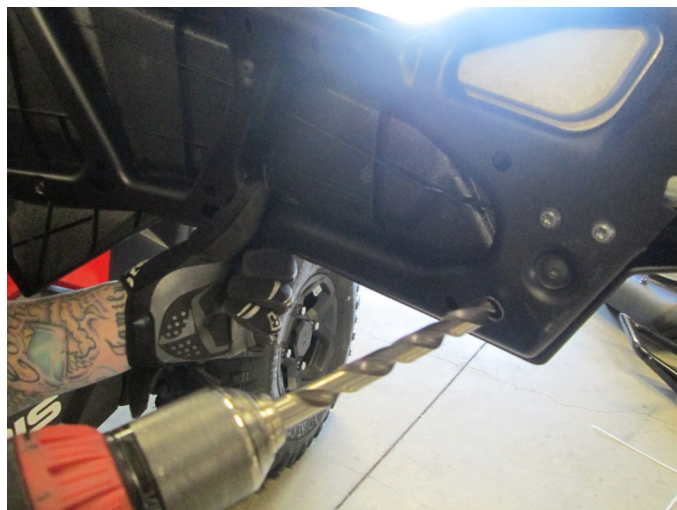

4. Remove the middle, lower T25 Torx bolt. Place door insert on door and line up all mounting holes. Loosely install the 1/4"-20 bolts and washers into the rubber plug-in nuts, as well as the T25 Torx bolt. Adjust door insert to ensure best fit and minimize gaps between door and door insert. Make sure the weather stripping creates a good seal when the door is in the closed position. Fully tighten hardware.



5. Locate the lower mounting hole on the stealth door skin. You will need to drill a hole through the stock door plastic using a drill and 1/4" drill bit at this location. Once this is done, secure the door to the plastic using the provided M6 bolt and acorn nut.

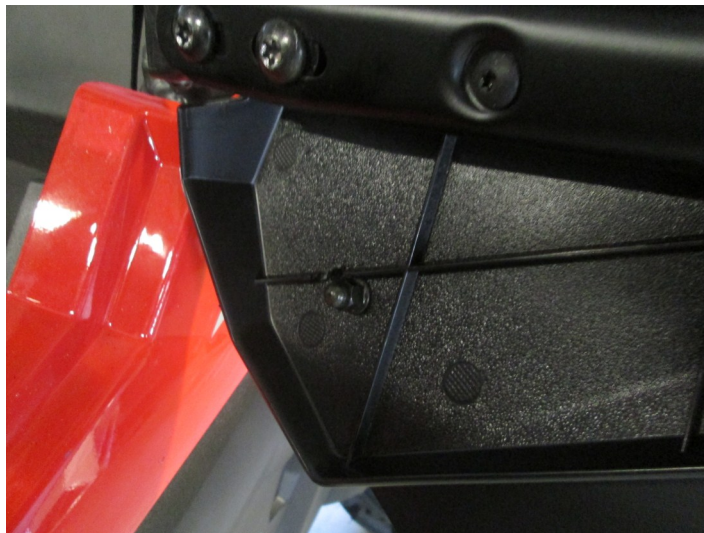

12. Loosely install half clamps to the quarter panel using the provided M6 bolts. Line the quarter panel with the door frame, making sure the edges of the quarter panel run along the center lines of the tube and there is an even gap between the panel and plastic trim. Tighten down hardware.



13. Finally, make sure all hardware and parts are properly fastened before operating vehicle. Installation is now complete.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	P159210-09	DRIVER LOWER CLAMP ASSEMBLY	1
2	P159210-07	UPPER CLAMP ASSEMBLY	2
3	P159210-05	PASSENGER LOWER CLAMP ASSEMBLY	1
4	HDWB0251	BOLT, M6 x 16MM, BUTTON HEAD FLANGE, BLACK ZINC	8
5	HDWN0051	M6 x 1.0 ACORN FLANGED HEX NUT, BLACK ZINC, 4MM DEEP	2
6	HDW00120	1/4"-20 RUBBER INSULATED BRASS RIVET NUT	4
7	HDWB0159	BOLT, 1/4-20 X 1" SOCKET BUTTON HEAD BOLT	4
8	HDWW0004	WASHER, 1/4 FLAT ZINC	4

For further information on installation instructions and warnings please visit our website WWW.PROARMOR.COM or contact customer service at 1-888-31-ARMOR