




CONTENTS:

- 1- STOCK ALUMINUM ROOF
- 2- HARDWARE: (2) CLAMPS, (4) M6 12MM BOLTS
(4) M6 NYLOC NUTS

TOOLS REQUIRED: » RATCHET, 4MM SOCKET

RS1 Stock Aluminum Roof Instructions (P186R126)

NOTE: Prior to installation, please verify if a revised version of this instruction sheet is available on proarmor.com.

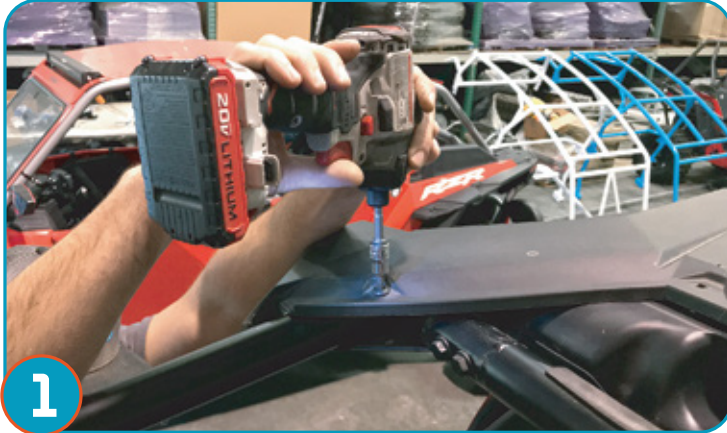

1

Remove four bolts from the plastics located on the top of the vehicle.



2

Apply the provided foam padding strips to the top of the stock cage.




3

Place Pro Armor stock roof onto the vehicle and sliding the roof under the roof plastics, lining up bolt holes at the rear of the roof.



4

Re-apply the (4) bolts removed in step 1.

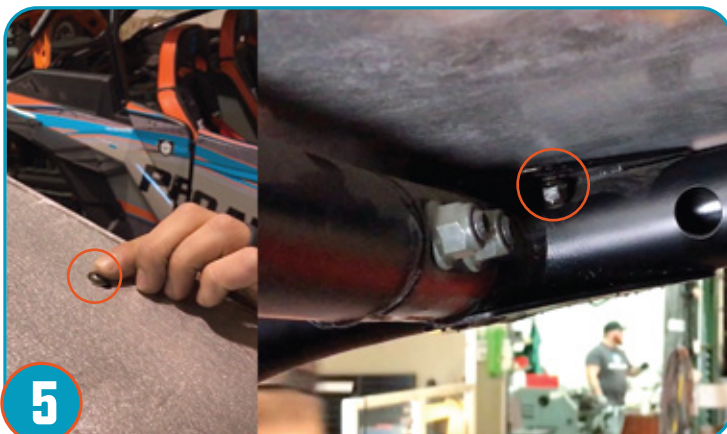

5

Using the provided hex bolts apply bolt and nut to middle location of roof on each side of vehicle/roof.



6


Using the provided (2) clamps and (2) hex bolt/nuts to secure the front of roof to stock cage as shown.



RS1 Stock Aluminum Roof Instructions (P186R126)



Tighten down all (8) bolts making sure roof is firmly secured to the vehicle.

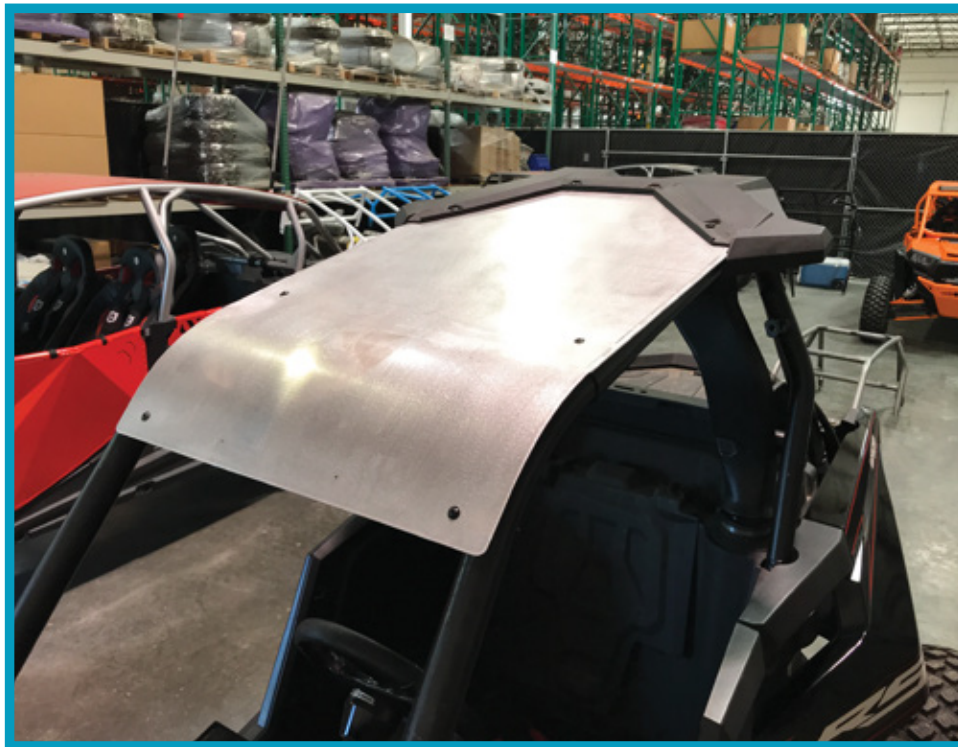

⚠ WARNING

- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
- **Always** wear and use proper safety equipment when using any Pro Armor product.
- Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.
- **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.
Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.
- If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.