
## SPEAKER BRACKET INSTRUCTIONS (P199U3O4)



A. Unplug speakers, B. remove bolt C. Unhinge speaker seperating speaker from OEM bracket. Remove speakers and set aside.




Remove OEM brackets by removing two bolts as shown. Repeat for opposite bracket.

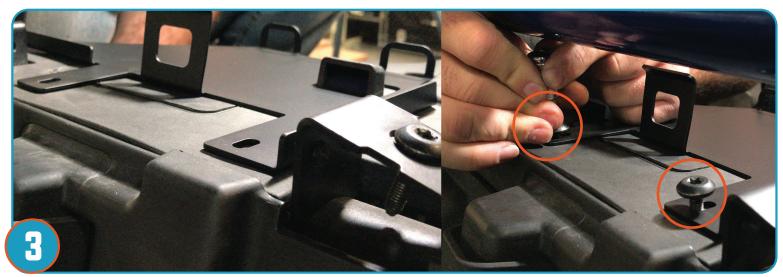

Place your new brackets using the bolts removed in step 2 at the same location as shown.



## SPEAKER BRACKET INSTRUCTIONS (P199U3O4)

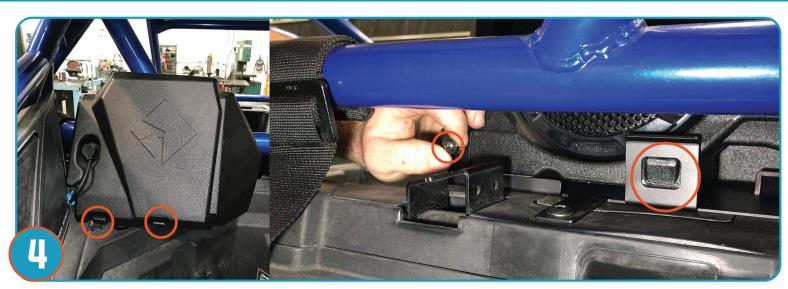


Place speaker into position by clipping into rear mounts then clip into front mount. Install remaining bolt removed in step 1.





Connect power plugs from speakers to wiring.

- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
- Always wear and use proper safety equipment when using any Pro Armor product.
- · Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.



## Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.

 If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service [888]312-7667 or have an authorized dealer or trained technician, inspect your installation.

**AWARNING**