

**PRO R/TURBO R FRONT BUMPER (P2111P360) & SKID (P2111P363)**



**1**

Remove Stock front bumper plate, removing 4 bolts as shown. Stock front bumper plate can be kept or discarded as it will not be returned to vehicle after bumper install.



**2**

Remove front plate from vehicle and proceed to remove 2 bolts on each side of front bumper plastics, as shown.



**3**

Remove the front grille by depressing the top clips as shown.



**4**

To remove plastics unclip from inside/under front bumper and remove plastics from vehicle.



**5**

Remove the front 4- bolts & 2 plastic rivet clips as shown.



**6**

Remove front bumper from vehicle and set aside.





## PRO R/TURBO R FRONT BUMPER (P2111P360) & SKID (P2111P363)




7

Position your new Pro Armor front bumper lining up mounting bolt holes (4).



8

Insert provided bolts and tighten all 4 bolts (2 upper/2 lower) securing the bumper to the chassis.

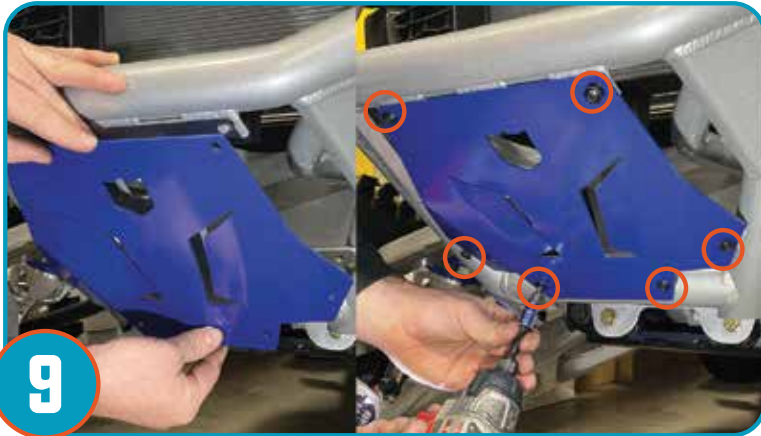

9

Install the front skid plate first by lining up bolt holes on skid with the bumper and tighten (6) bolts to secure to bumper.



10

Re-apply bumper plastics and secure with (4) bolts removed in step 2.



11

Insert the grille back in position assuring the two clips secure in place.



12

Insert top bumper caps (2) on either side of the front bumper using a rubber mallet. Front bumper & skid plate install is complete.