




CONTENTS:

1- ROOF
16 - BUTTON HEAD BOLTS
1- FOAM ADHESIVE

TOOLS REQUIRED:

1- 4MM ALLEN KEY

PRO R4 & TURBO R4 ROOF INSTALL (P2112R137/P2112R138)

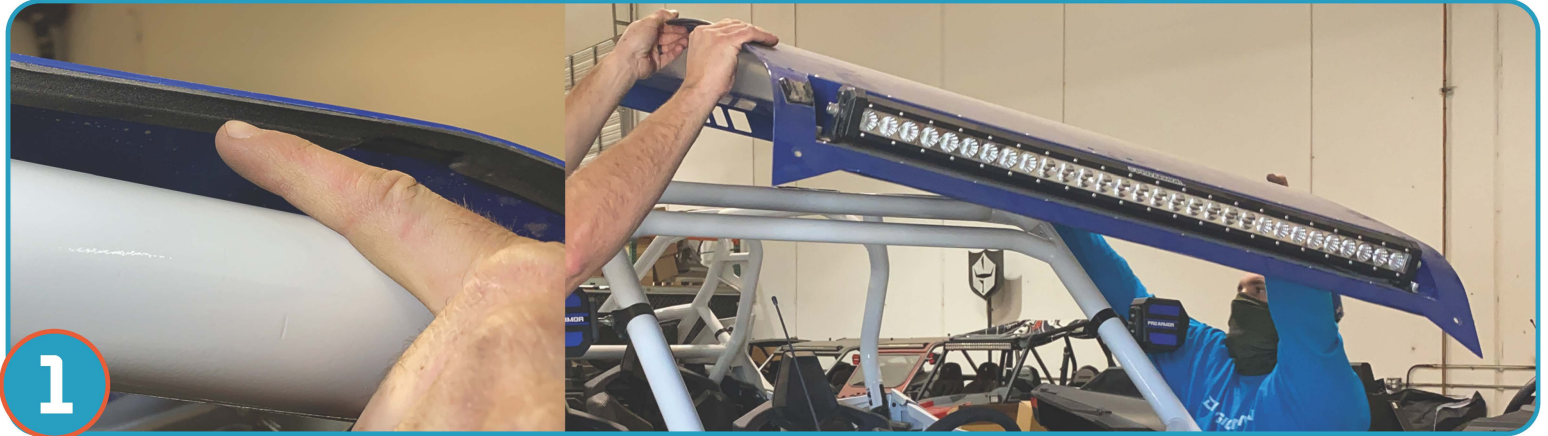

1

Apply rubber liner along the sides of roof and on cross sections of cage tubing along the middle of cage. With a little help from a friend place roof onto vehicle and line up bolt holes for proper placement.



2

Insert and hand tighten 16 screws then tighten. Do not overtighten.



INSTALLED CAGE



INSTALLED ROOF

- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
 - **Always** wear and use proper safety equipment when using any Pro Armor product.
 - Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.
 - **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.
- Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.**
- If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.

⚠ WARNING