

PRO ARMOR

EVERY RIDE HAS A STORY



CONTENTS:

1- PRO R/TURBO R WINDSHIELD


HARDWARE:

2- CLAMPS

1- RUBBER STRIPPING

4- M6 16MM BOLTS

PRO ARMOR PRO R/TURBO R WINDSHIELD (P219W463)

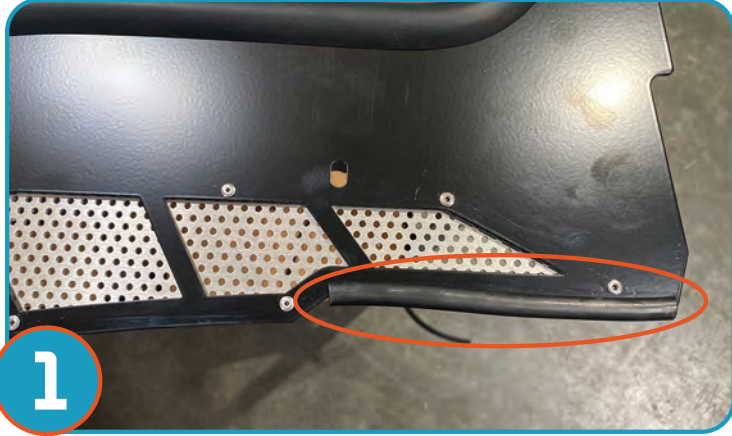

1

Pre-install prep: Apply provided rubber stripping (if needed) to bottom corners of windshield on both sides as shown. Trim stripping as needed for proper fit.



2

If roof already installed, remove top two roof screws and place windshield on the vehicle, sliding top of windshield under roof and lining up bolt holes. Use provided hardware.



3

Hand tighten upper windshield with (2) provided bolts threading the bolts into position. One on each of the top corners as shown.




4

Using the provided (2) brackets/bolts, secure the lower windshield tightening the bracket, threading bolt from outer windshield to cage. One bracket per side of windshield.



Complete your installation by tightening all four (4) bolt locations to properly secure windshield to your cage system.

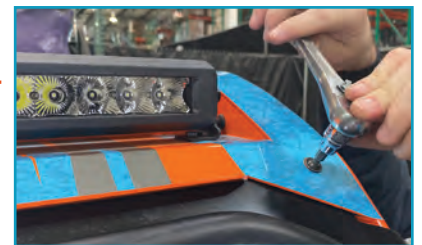

Never stick hands, head or arms outside of vehicle at any time when it is in motion.

• **Always** wear and use proper safety equipment when using any Pro Armor product.

• Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.

• **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.

Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.

• If you have questions about your installation or are unable to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.

WARNING