



**INCLUDED HARDWARE:**  
P2214P361  
2- M10 WELDNUT PLATES  
4- M10 X 25MM BOLTS  
2- M10 NYLOC NUTS


**INCLUDED HARDWARE:**  
P2214P367  
4- M6 X 16MM BOLT  
4- NYLOC M6 NUTS  
4- HALF CLAMPS

## RZR XP/XP 4 REAR BUMPER (P2214P361) & SKID (P2214P367)




**1**

Place your new Pro Armor rear bumper aligning upper bolt holes (2), using provided hardware and tighten as shown for both sides of vehicle.

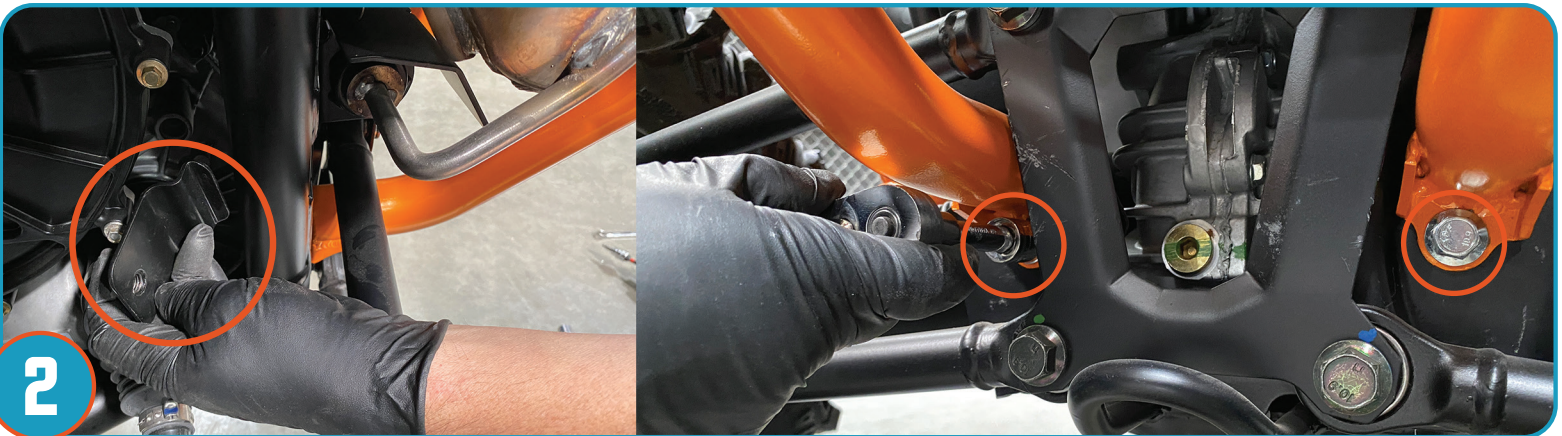

**2**

Using the provided back plates thread bolt through lower mounting points while holding the rear plate and tighten to secure rear bumper to chassis.

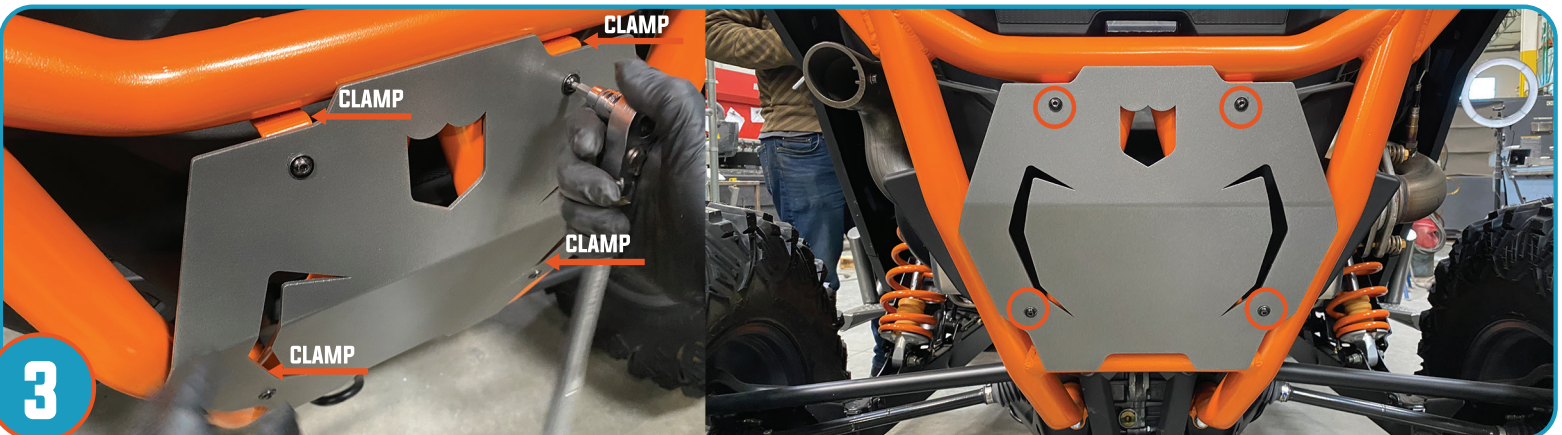

**3**

Apply the (4) provided clamps to the bottom and top rear of the skid plate threading 4 bolts through front of skid, position on bumper lining up bolt holes and position clamps on rear tubes to secure rear skid to bumper as shown and tighten bolts (do not overtighten). Install is now complete.

**PRO ARMOR**  
EVERY RIDE HAS A STORY



## RZR XP/XP 4 REAR BUMPER (P2214P361) & SKID (P2214P367)



- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
  - **Always** wear and use proper safety equipment when using any Pro Armor product.
  - Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.
  - **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.
- Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.**
- If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.

**⚠ WARNING**