



XP/XP4 FRONT A-ARM INSTALL INSTRUCTIONS (P2214P365)



1 Place the provided mounting bracket as shown.



2 Position the Arm Guard, lining up hole on bottom of A-arm guard.



3 Using a provided 6mm screw, Hand tighten to hold guard in place.



4 Position one side of the long mounting bracket as shown.



5 Using 2 of the provided 6mm screws, hand tighten to hold long bracket to A-arm guard.




6 Position and tighten opposite long bracket to arm tube as shown.



XP/XP4 FRONT A-ARM INSTALL INSTRUCTIONS (P2214P365)



7 Tighten all (5) screws firmly securing the A-Arm guard to brackets and vehicle.

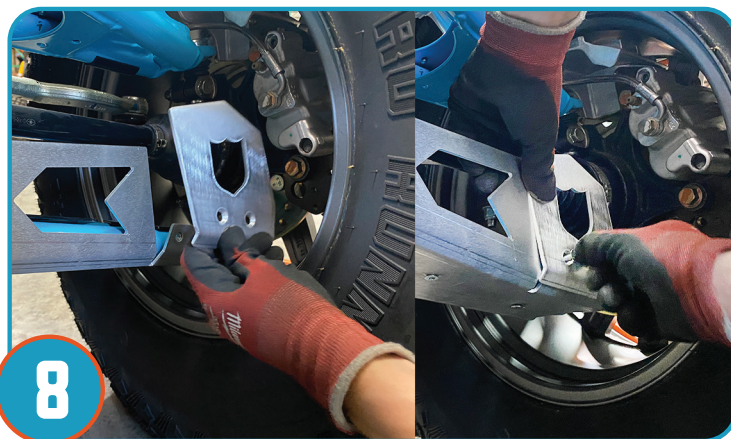

8 Position and line-up mounting holes for the boot guard and secure with (2) 6mm screws. Repeat steps for opposite side A-Arm Guard.



A-ARM COMPONENTS:



WARNING

This product can expose you to chemicals including arsenic, which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov