




RZR XP ROCK SLIDERS INSTALL INSTRUCTIONS (P2214P370)




1

Begin by removing any dirt/obstructions that may interfere with the installation of the rock slider. Make sure all of the mounting holes are clear of debris.

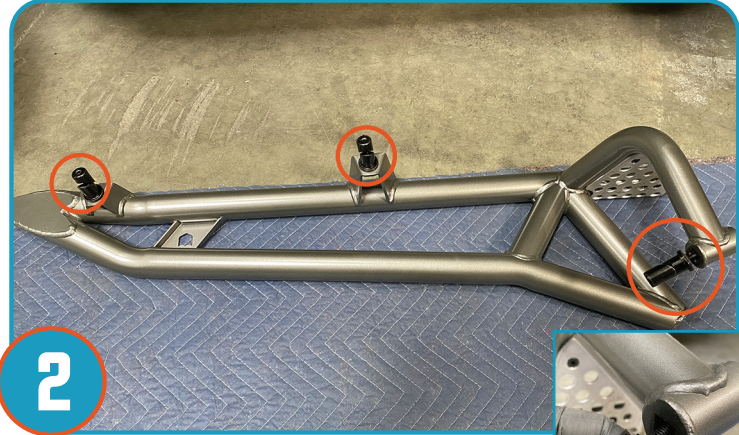


2

** Assemble the supplied expansion anchors with the rock slider as shown above. Insert the bolt, washer, and sleeve into the mounting hole first.
*Note: Make sure square fitment sits flush to square mounting point as highlighted for rear mounting point. **Refer to anker assembly diagram (Page 2).

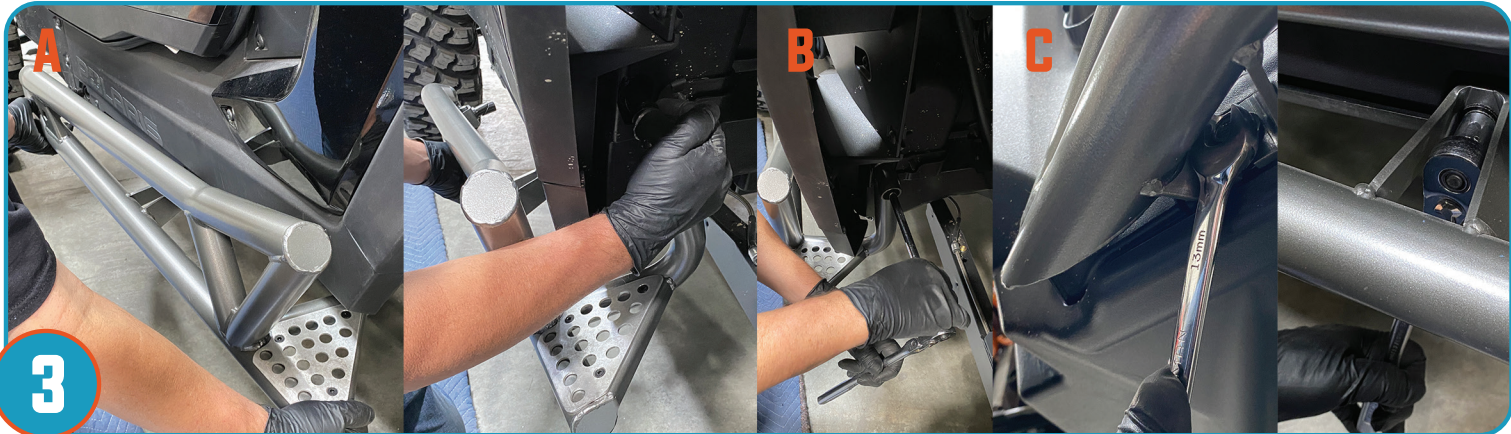

3

A. Place the rock slider with the expansion anchors onto the vehicle. Make sure the sleeves of the expansion anchors are still seated properly in the grooves in the mounting holes of the rock slider before you proceed to tighten the anchors. Starting at the rear. B. Tighten Rear mounting point. C. Tighten Front & Middle mounting points. Repeat steps for other side.

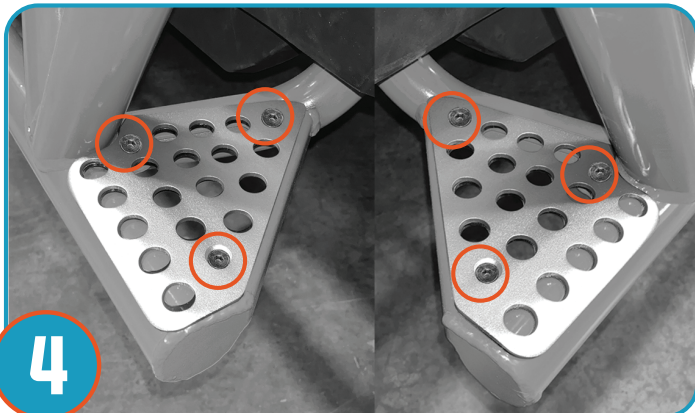

4

Secure step-plate to rear of rock sliders as shown using provided bolts for both driver & passenger sides.



RZR XP ROCK SLIDERS INSTALL INSTRUCTIONS (P2214P370)

++EXPANSION ANKER ASSEMBLY



- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
 - **Always** wear and use proper safety equipment when using any Pro Armor product.
 - Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.
 - **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.
- Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.**
- If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.

⚠ WARNING