





XP REAR SEAT INSTALL INSTRUCTIONS (P2215S196)




1 Remove stock seat from vehicle by reaching behind seat and pulling on the release handle (Red)

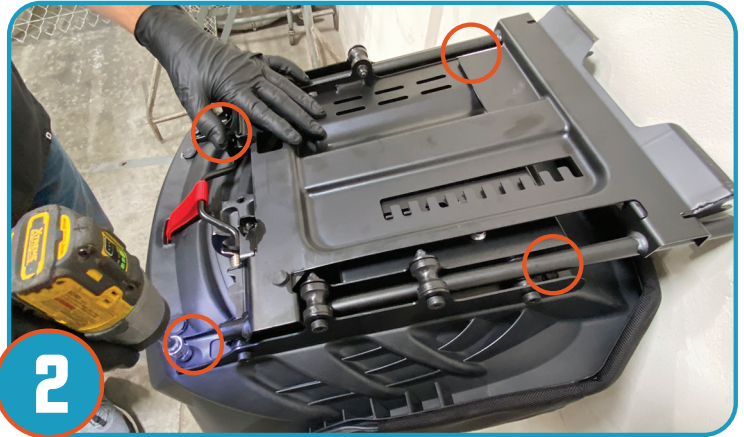

2 Remove the (4) T27 Torx bolts holding the plastic seat base to the stock seat.

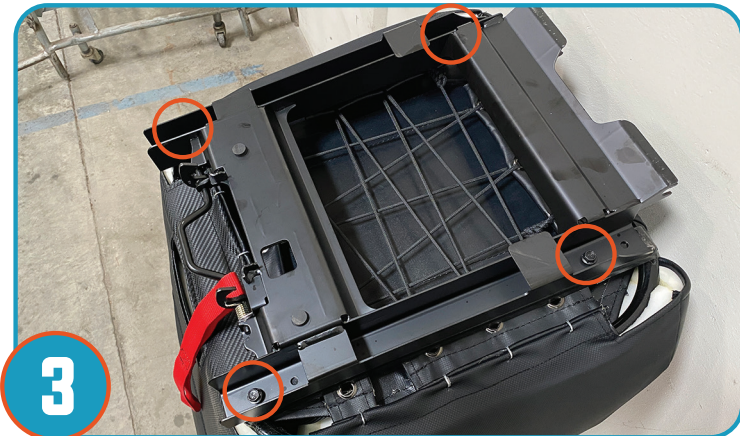

3 Place the Stock seat base onto your new seat, lining up the mounting holes of base to the new seat. Tighten (4) T27 Torx bolts to secure base to seat. Sliding base for clear bolt access.

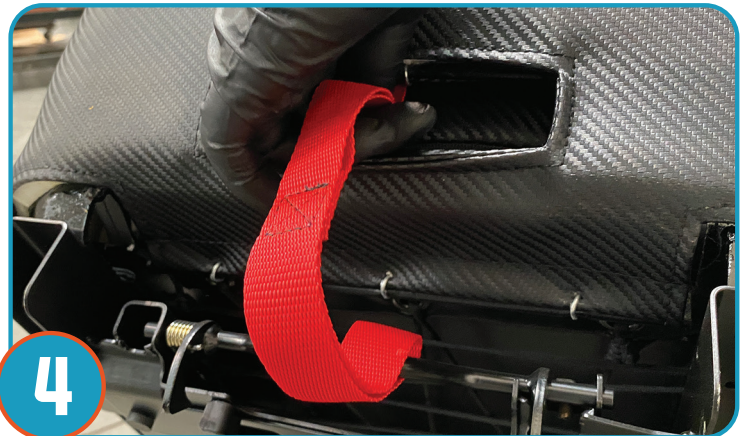

4 Run the red release strap through rear slot to the front of seat.



5 Once base is mounted securely to the seat, place the seat in vehicle angle seat leaning toward the front of vehicle and then back toward the rear of vehicle and click into place. Making sure the seat is properly secure seat.



- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
- **Always** wear and use proper safety equipment when using any Pro Armor product.
- **Improper** use of directions and/or product can result in injury to yourself or damage to your vehicle.
- **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.
- **Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.**
- If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.

⚠ WARNING