




**HARDWARE CONTENTS:**

- (8) – M5 X .8 X 12 MM BUTTON HEAD CAP SCREWS
- (6) – M5 X .8 X 14 MM BUTTON HEAD CAP SCREWS
- (6) – M5 X .8 X 16 MM BUTTON HEAD CAP SCREWS
- (2) – M5 X .8 X 18 MM BUTTON HEAD CAP SCREWS
- (22) – M5 LOCK WASHERS
- (22) – M5 X .8 CAP NUTS – ZINC

## PRO ARMOR NXT LVL REAR BUMPER (NXPRB232)

+BOLT SIZES ON IMAGE ARE LABELED IN MILLIMETERS (MM)

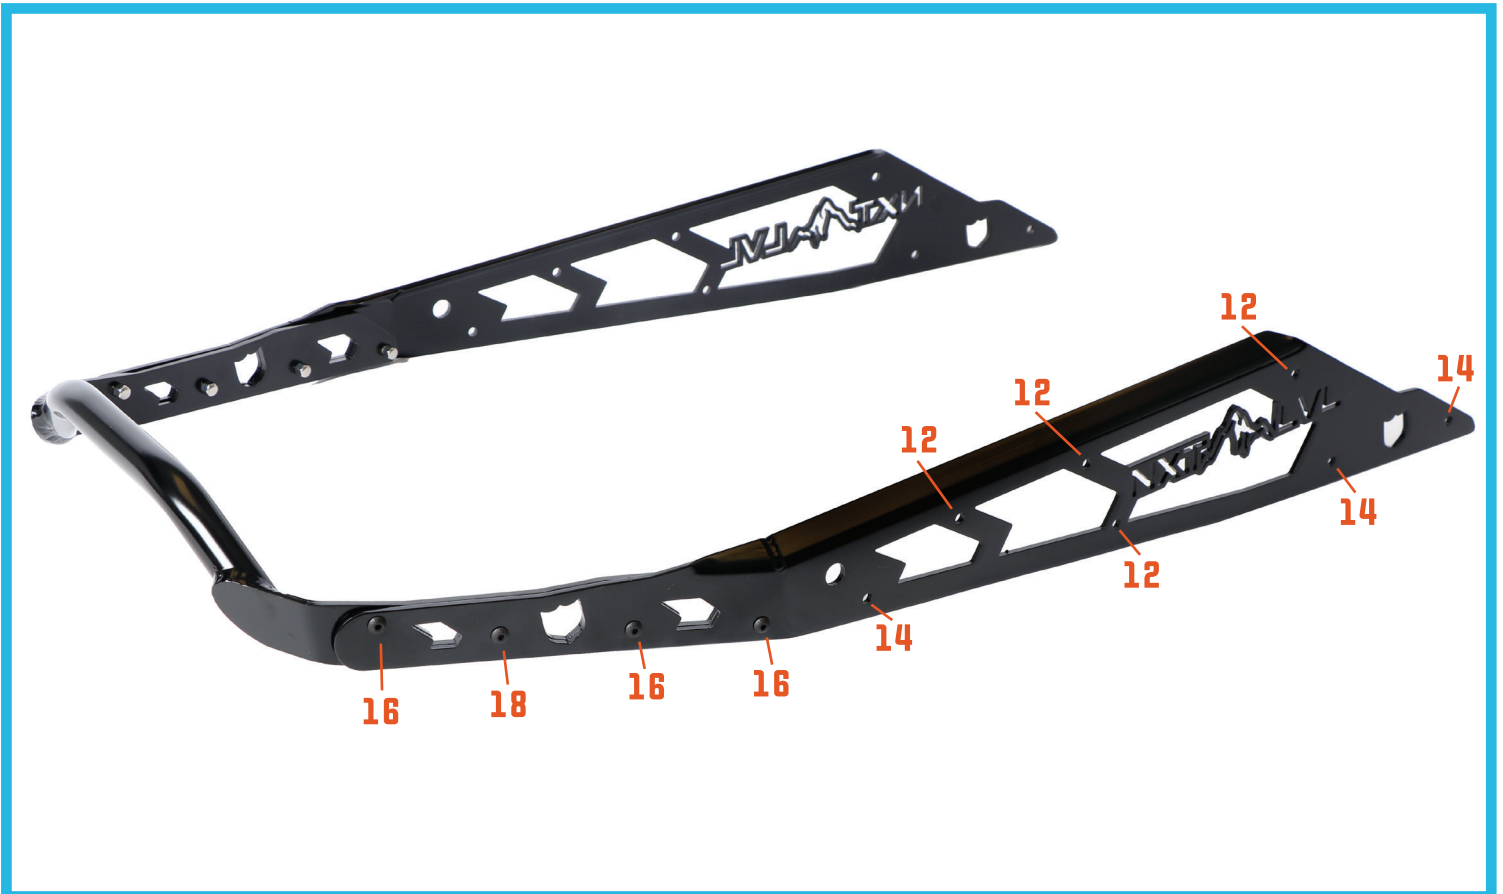

1. Install the tunnel rails first using the bottom 4 holes. Bolts on the outside, washer and nut on the inside. Hand tighten.
2. Install the grab handle starting with the rear most 16mm bolt, then the 18mm bolt.
3. Using a 7/32" drill bit, drill the 5 remaining holes on each side through the tunnel.
4. Install remaining hardware. Tighten all bolts.

- **Always** wear and use proper safety equipment when using any Pro Armor product.
- Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.
- **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.
- **Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.**
- If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.

**⚠ WARNING**