

KTM/HUSQVARNA RADIATOR GUARD INSTALLATION INSTRUCTIONS

STEP 1:

Remove the seat and shrouds.

STEP 2:

Remove the two radiator mounting bolts that hold the radiator to the frame. Remove the stock black plastic radiator protector from both sides.

STEP 3:

Install spigot guard on the right radiator guard using the provided M5 x 12 Flat Head screws. Some bike models do not require spigot guard (i.e. 450 SX-F/XC-F.)



STEP 4:

1. Install the radiator guard onto the radiator using the provided 6mm fasteners to the frame. Do not tighten all the way.
2. Next, install the guard to the outside of the radiator using two of the included self-tapping fasteners.
3. Tighten.



STEP 5:

Install shrouds and seat back on bike. Make sure to bolt the shrouds to the guards using the OEM fasteners.

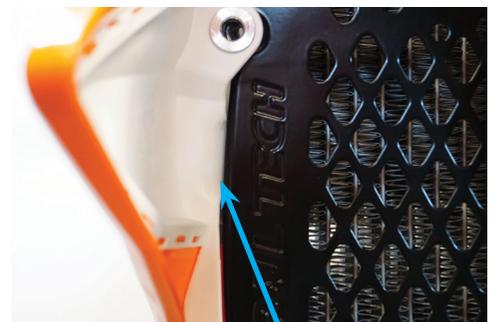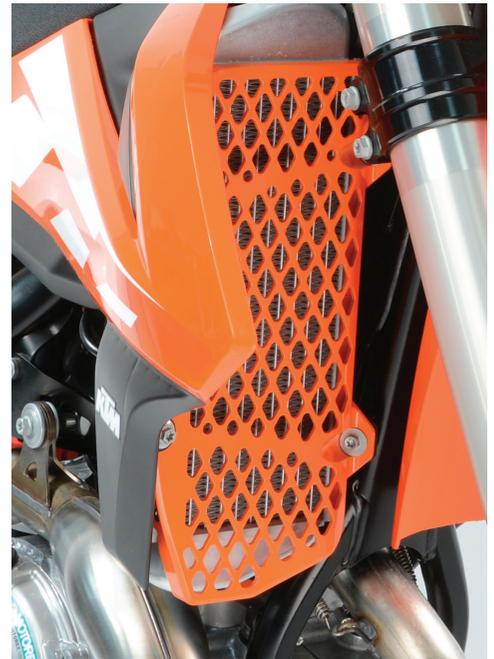

On newer models, a small portion of the shroud may need to be trimmed to allow proper seating.