


KTM STUB CONNECTOR INSTALLATION NOTES


2000-05 Electric Start Models

Follow the included instructions for installing the stator. After the stock regulator/rectifier is removed, complete the following steps:

1. Remove terminals from connector: Insert small flatblade screwdriver into front of connector and lift the lock (Fig 1.) Simultaneously pull the wire from the back of connector (Fig 2.)

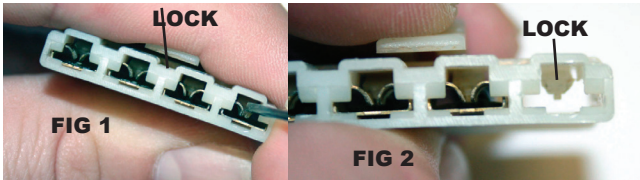

2. Slide included shrink tubing over the wires.
3. Plug stub connector spades into the wiring harness, making sure wire colors match (Fig 3.)

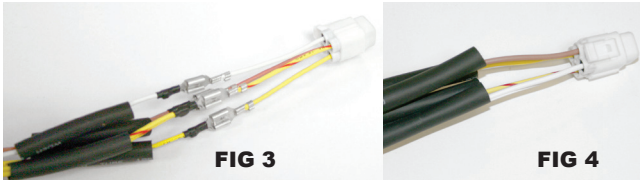

4. Shrink the heat tubing with a heat gun (Fig 4.)
5. Continue with the wiring instructions included with the stator kit.