

# GARAGE DOOR OPENER KIT



**P/N 2882132**

## APPLICATION


Indian Heavyweight Motorcycles with Infotainment

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

## KIT CONTENTS

This Kit includes:

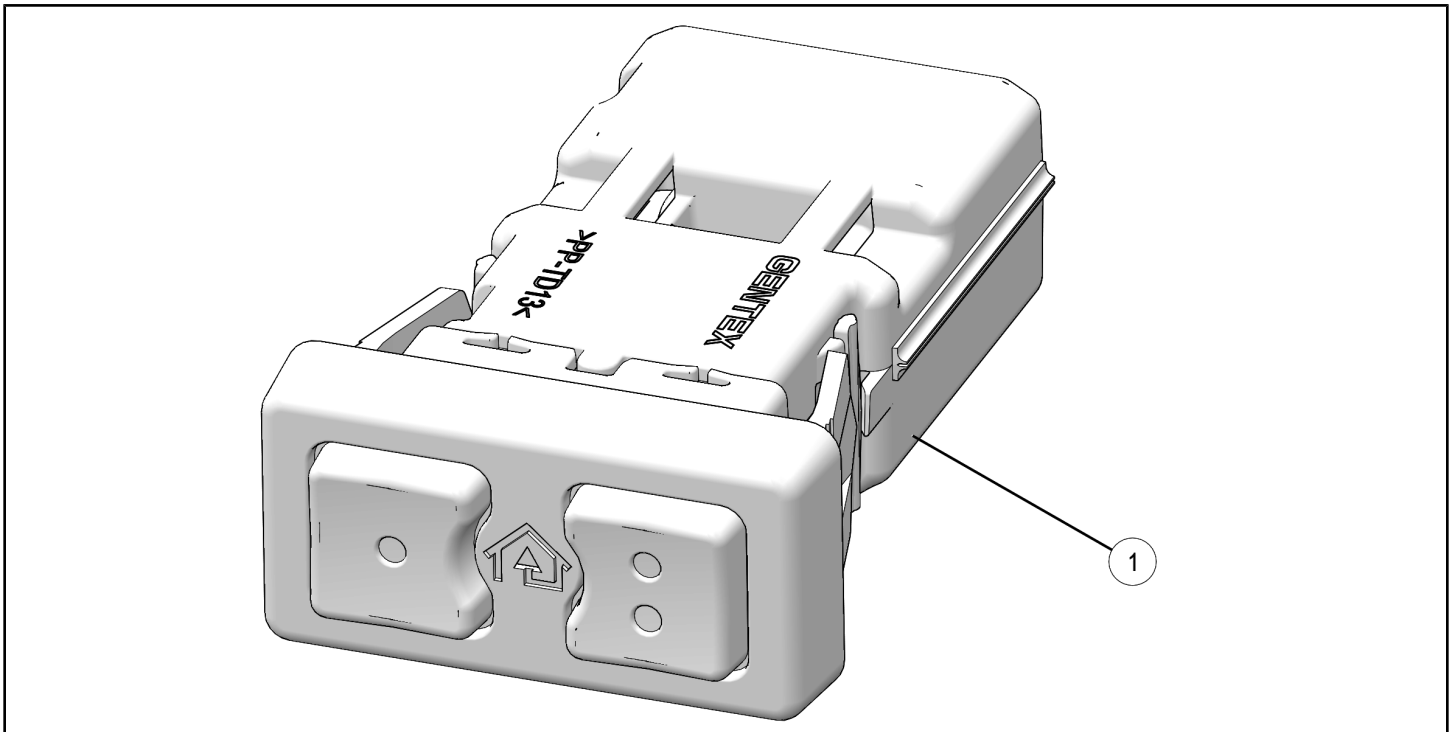

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Garage Door Opener Assembly	4015371
	1	Instructions	9927296

## TOOLS REQUIRED

No tools required

## IMPORTANT

Your Indian GARAGE DOOR OPENER KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## ASSEMBLY TIME

Approximately 10 minutes

## INSTALLATION INSTRUCTIONS

### INSTALLING THE GARAGE DOOR OPENER TO THE MOTORCYCLE

1. Locate the rubber plug (A) that occupies the hole where the garage door opener will mount on the faring. The rectangular plug is on the inside of the faring, on the right side.




2. Gently remove the rubber plug (A) from the faring. There will be a harness (B) attached to the backside of the rubber plug. This harness is for the garage door opener. If the harness is not attached to the backside of the rubber plug (A), locate the harness and pull it through the rectangular hole in the faring.



3. Plug the harness (B) into the back of the garage door opener ①. Make sure the connector snaps into place, as indicated by an audible click.



4. Push the garage door opener ① module through the cutout in the faring until it snaps into place.

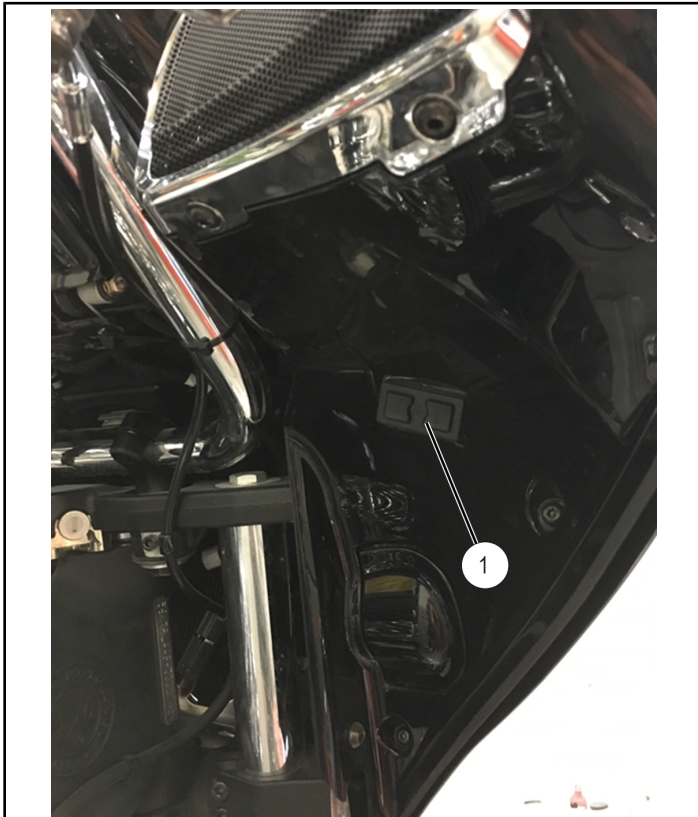

## **PROGRAMMING 2-BUTTON HOMELINK BEFORE PROGRAMMING HOMELINK**

1. During programming, it is possible that garage door openers, gates, or other devices may operate. For this reason, make sure that people and objects are clear of the garage door or other devices to prevent injury or other potential harm.
2. It is recommended that a new battery be placed in the garage door remote for more accurate programming.
3. Garage door openers manufactured after 1995 may be equipped with rolling code protection. If this is the case, you may need a stepladder or other sturdy, safe device to reach the “Learn” or “Smart” button on the garage door motor.
4. Please note that the instructions below apply to the majority of HomeLink use cases. However, there are some applications or compatible systems that require slightly different instructions.

## **PROGRAMMING A BRAND NEW HOMELINK**

1. Position the garage door remote 1-3 inches away from the HomeLink buttons, keeping the indicator light in view.
2. Using both hands, simultaneously press and hold both the desired HomeLink button and garage door remote button. DO NOT release until the HomeLink indicator light flashes slowly and then changes to solid or rapidly flashing. The change in flashing indicates the frequency signal has been learned.

### **NOTE**

Some gate operators and garage door openers may require you to use the “cycling” procedure noted in the “Programming an entry gate” section.

3. Press and hold the programmed HomeLink button and observe the indicator light.
  - a. If the indicator light is solid/continuous, programming is complete and your device should activate when the button is pressed and released.
  - b. If the indicator light blinks rapidly, proceed with the following programming instructions for a rolling code device.
  - c. A second person may make the following steps quicker and easier.
  - d. Use a stepladder or other stable, safe device.

### Rolling Code

4. At the garage door opener in the garage, locate the “learn” or “smart” button (usually near where the hanging antenna wire is attached to the unit). If there is difficulty locating the “learn” or “smart” button, reference the garage door opener’s manual.
5. Press and release the “learn” or “smart” button (the name and color of the button may vary by manufacturer).

#### NOTE

Once the button is pressed, there are typically about 30 seconds in which to initiate the next step.

6. Return to the vehicle and press and release the programmed HomeLink button. Repeat the rolling code procedure up to 3 times to complete the training process. HomeLink should now activate your rolling code equipped device.
7. To program additional HomeLink buttons, repeat this process.
8. Once programmed, both HomeLink and/or the original garage door remote may be used to activate the device (e. g. garage door, entry lock, gate, etc.).

### PROGRAMMING AN ENTRY GATE (FOR U.S.A. OWNERS)/PROGRAMMING A DEVICE IN THE CANADIAN MARKET

1. Position the garage door remote 1-3 inches away from the HomeLink buttons, keeping the indicator light in view.
2. Using both hands, hold the HomeLink button continuously, while simultaneously pressing and releasing the garage door remote button at 2 second intervals. DO NOT release the HomeLink button until the indicator light flashes slowly and then changes to solid or rapidly flashing. The change in flashing indicates the frequency signal has been learned.
3. Press and hold the programmed HomeLink button and observe the indicator light.
  - a. If the indicator light is solid/continuous, programming is complete and your device should activate when the HomeLink button is pressed and released.
  - b. If the indicator light blinks rapidly, proceed with the following programming instructions for a rolling code device.
  - c. A second person may make the following steps quicker and easier.
  - d. Use a stepladder or other stable, safe device.

### Rolling Code

4. At the garage door opener/gate, locate the “learn” or “smart” button (usually near where the hanging antenna wire is attached to the unit). If there is difficulty locating the “learn” or “smart” button, reference the garage door opener/gate's manual.
5. Press and release the “learn” or “smart” button (the name and color of the button may vary by manufacturer).

#### NOTE

Note: Once the button is pressed, there are typically about 30 seconds in which to initiate the next step.

6. Return to the vehicle and press and release the programmed HomeLink button. Repeat the “press/release” sequence up to 3 times to complete the training process. HomeLink should now activate your rolling code equipped device.
7. To program additional HomeLink buttons, repeat this process.
8. Once programmed, both HomeLink and/or the original garage door remote may be used to activate the device (e. g. garage door, entry lock, gate, etc.).

## **REPROGRAMMING A SINGLE HOMELINK BUTTON**

When the following procedure is performed, buttons which already have devices registered to them can be overwritten:

1. Press and hold the desired HomeLink button.
2. After about 20 seconds, the HomeLink indicator will start slowly flashing. While continuing to hold the button, position the garage door remote 1-3 inches away from the HomeLink buttons and press and hold the garage door remote until the indicator light changes to solid or rapid flashing. The change in flashing indicates the frequency signal has been learned.

### **NOTE**

Some gate operators and garage door openers may require you to use the "cycling" procedure noted in the "Programming an entry gate" section.

3. Press and hold the programmed HomeLink button and observe the indicator light.
  - a. If the indicator light is solid/continuous, programming is complete and your device should activate when the HomeLink button is pressed and released.
  - b. If the indicator light blinks rapidly, proceed with the instructions listed in the "Rolling Code" section.
4. If you do not program a new device to the button, it will revert to the previously held programming.

## **ERASING YOUR HOMELINK MEMORY (BOTH BUTTONS)**

1. Press and hold both buttons for 10 seconds until the HomeLink indicator light changes from solid to flashing indicator.
2. If you sell your vehicle, be sure to erase the HomeLink memory.

## **SOMMER ROLLING CODE PROGRAMMING STEPS**

### **NOTE**

If you are training two devices, and only one is a Sommer, you will need to train the Sommer unit first, and then follow the "Reprogramming a single HomeLink button" instructions for your second device.

1. Press and hold both HomeLink buttons for 20 seconds, until the LED turns off. The HomeLink is now ready to be programmed to the Sommer rolling code opener garage door.
  - a. A second person will make the following steps quicker and easier.
  - b. Use a stepladder or other stable, safe device.
2. At the garage door opener in the garage, locate the "learn" or "smart" button (usually near where the hanging antenna wire is attached to the unit). If there is difficulty locating the "learn" or "smart" button, reference the garage door opener's manual.
3. Press and release the "learn" or "smart" button (the name and color of the button may vary by model).

### **NOTE**

Once the button is pressed, you have 10 seconds in which to initiate the next step.

4. Return to the vehicle and press and release the programmed HomeLink button. Repeat the "press/release" sequence up to 3 times to complete the training process. HomeLink should now activate your Sommer rolling code equipped device.