SHORT BOX KIT

P/N 2881626

APPLICATION

2016 GEM E2, E4 and E6

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

KIT CONTENTS

This Kit includes:

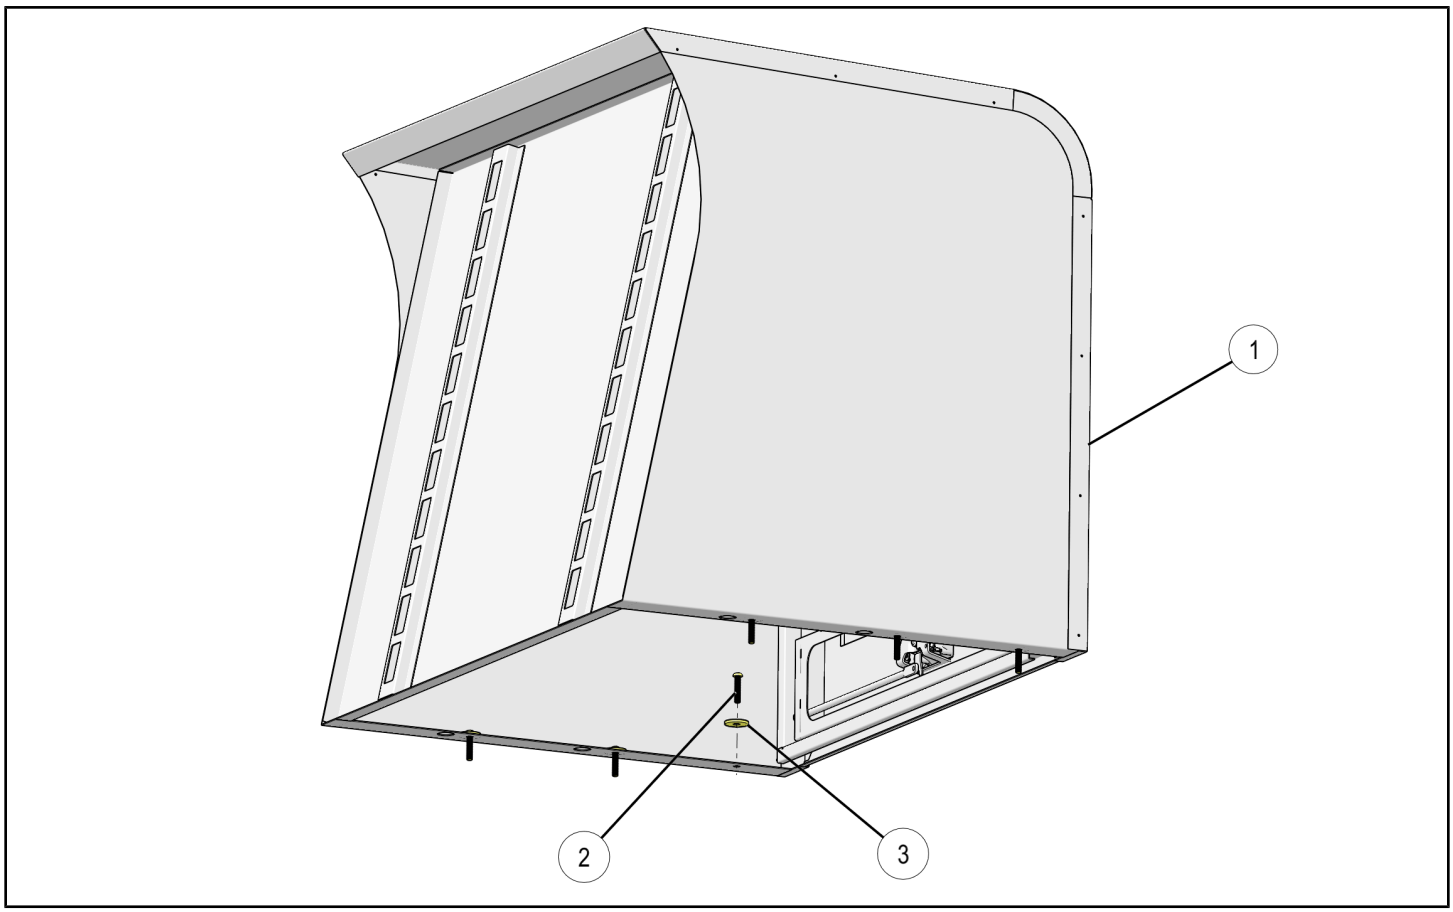

REF	QTY	PART DESCRIPTION	PART NUMBER
1	1	Short Box Assembly	2635877
2	6	Button Screw - M8 X 40	7520160
3	6	Flat Washer, 0.343 X 1.25 X 0.134	7555701
4 (Not Shown)	1	Decal-Cargo Limit, Bed	7183756
	1	Instructions	9926717

TOOLS REQUIRED

- Metric Wrench Set and Ratchet

IMPORTANT

Your SHORT BOX KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

ASSEMBLY TIME

Approximately 15 minutes

INSTALLATION INSTRUCTIONS

NOTE
If short bed is not installed on unit, please install by referring to short bed mounting instructions (P/N 9926532).

1. Mount short box assembly ① onto short bed using screws ② and washers ③ as shown.
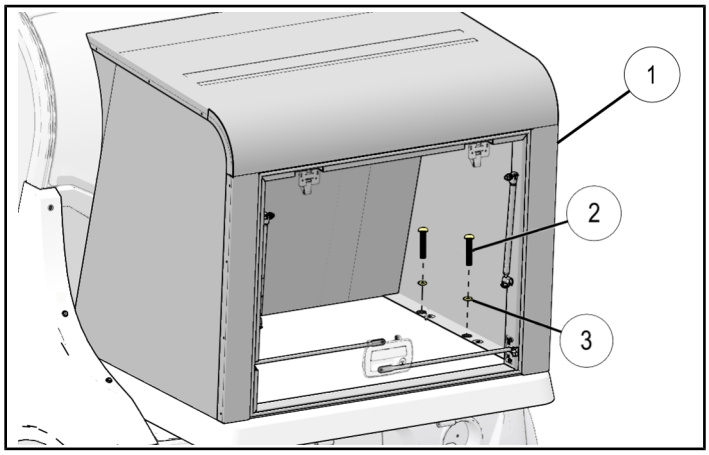
TORQUE
17 ft. lbs. (23 Nm)