

Hardcoat Full Tilt Windshield

For Yamaha Viking P/N 2736

ASSEMBLY / OWNERS MANUAL

Before you begin, please read and understand these instructions. Also review the box contents to ensure all parts are accounted for.



Kolpin Outdoors, Inc. | 9955 59th Ave N | Plymouth, MN 55442

(877) 956-5746 or (763) 478-5800 l <u>www.kolpin.com</u> l <u>customerservice@kolpin.com</u>

BEFORE YOU BEGIN

Thank You and congratulations on your purchase! Kolpin windshields are the most durable windshields in the industry. With proper installation, care, and maintenance, your Kolpin windshield will last for years to come! Before You Begin:

- Inspect the contents of the package to ensure all parts and tools are accounted for. If any hardware is missing, do not return to the store. Call Kolpin directly for assistance. Toll Free 1-877-956-5746.
- Please read and understand all assembly instructions, notices and warnings before assembling and operating your Kolpin windshield.
- For proper installation, two people are highly recommended.
- Keep these instructions for future reference. Dealers: Provide owner manual to customer at time of purchase.
- To facilitate installation, make sure your vehicle is clean and free of debris.
- All directions referring to right and left are when the rider is sitting on the machine.

APPROXIMATE ASSEMBLY TIME: 30 minutes TOOLS REQUIRED FOR INSTALLATION:

- 4 mm hex socket or hex key
- Shears or wire cutter
- Scissors

SAFETY INFORMATION

Our windshields were designed with your safety in mind. Please read and understand all Cautions, Notices and Warnings in this manual before you begin.

DANGER

TO AVOID SERIOUS INJURY OR DEATH:


- 1. OPEN POSITIONS ON FULL TILTING WINDSHIELDS ARE DESIGNED FOR LOW-SPEED RIDING ONLY.
- 2. IF VEHICLE IS TRAILERED FACING FORWARD, FULL TILTING WINDSHIELDS MUST BE IN THE CLOSED POSITION WITH TILTING T KNOBS TIGHTENED. FAILURE TO CLOSE AND SECURE THE WINDSHIELD MAY ALLOW AIRFLOW TO SEPARATE WINDSHIELD FROM VEHICLE, RESULTING IN AN ACCIDENT AND SEVERE INJURY OR DEATH. DO NOT TRAILER VEHICLE FACING REARWARD WITH WINDSHIELD INSTALLED. AIRFLOW MAY CAUSE WINDSHIELD TO SEPARATE FROM VEHICLE, RESULTING IN AN ACCIDENT AND SEVERE INJURY OR DEATH. REMOVE WINDSHIELD OR TRANSPORT VEHICLE IN ENCLOSED TRAILER.
- 3. UTVs ARE TO ONLY BE DRIVEN WITH CLEAN WINDSHIELDS FOR DRIVING VISIBILITY. IF DIRT OR DE-BRIS ACCUMULATES ON THE WINDSHIELD WHEN RIDING, STOP THE UTV AT THE NEXT SAFE LOCA-TION ON THE TRAIL TO CLEAR OFF THE WINDSHIELD BEFORE RESUMING RIDING.
- 4. ONLY INSTALL WINDSHIELDS THAT ARE DESIGNED FOR THE MAKE AND MODEL OF THE UTV. IN-STALLATION OF A WINDSHIELD THAT WAS NOT DESIGNED FOR THE UTV MAKE AND MODEL CAN IMPACT WINDSHIELD DURABILITY AND PERFORMANCE.
- 5. READ AND UNDERSTAND WINDSHIELD INSTRUCTION SHEETS AND UTV OWNER MANUAL BEFORE WINDSHIELD INSTALLATION OR OPERATING THE VEHICLE.
- 6. PERIODICALLY CHECK FOR WEAR AND TIGHTNESS OF ALL FASTENERS. REPLACE OR RE-TORQUE FASTENERS AS NECESSARY.

If any hardware is missing, do not return to the store. Call Kolpin directly for assistance.

Toll Free 1-877-956-5746.

Kit Contents:

			Spare Kit PNs		
ltem	Part Description	Qty	K100121	K100135	PUR3322
1	Windshield	1			
2	Clamp Assembly - 2.0"	4	2		
3	Button Head - M6 x 18mm	14	6	2	
4	Lock Washer - M6	18	6	6	
5	Dome Shoulder Washer - M6	8	4		
6	Windshield Slider	2		2	
7	T Knob - M6	2		2	
8	Upper Pivot	2		2	
9	Pivot Cylinder	4		2	
10	Lower Slider Mount	2		2	
11	Button Head - M6 x 38mm	4		4	
12	Bulb Seal - 60"	1			1

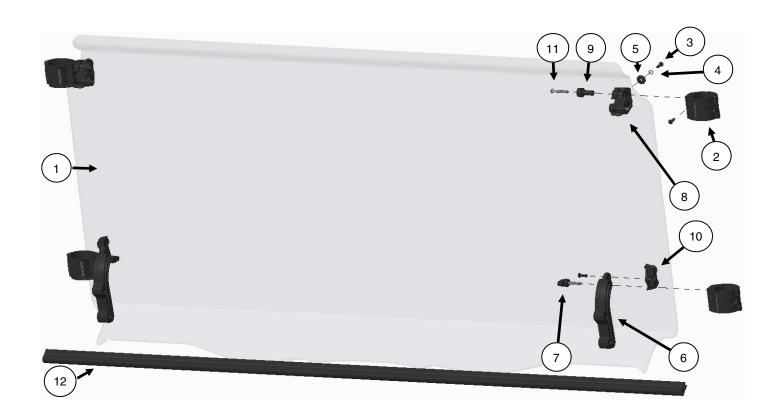

Installation Prep:


- 1. To facilitate installation, make sure that your vehicle is clean and free of debris.
- 2. All directions referring to right and left are when the rider is sitting on the machine.

Installation:


- 1. Remove Windshield (Item 1) from the box and set on a clean flat surface with the protective film still in tact.
- Peal back the protective film from the inside and outside surfaces ~2 inches inside the holes to prepare for component installation. Press the Bulb Seal (Item 12) into position along the bottom edge and cut the Bulb Seal to length using shears or a wire cutter. See Illustration 1-1.



- 3. Loosely Install (2) Upper Pivots (Item 8) using (4) M6 x 18mm Button Heads (Item 3), (4) M6 Lock Washers (Item 4), and (4) Dome Shoulder Washers (Item 5) onto the Windshield. Do not tighten at this time to ease installation onto the vehicle. See Illustration 1-2 & 1-3.
- 4. Install (2) Lower Slider Mounts (Item 10) using (4) M6 x 18mm Button Heads (Item 3), (4) M6 lock Washers (Item 4), and (4) Dome Shoulder Washers (Item 5) onto the Windshield (Item 1). See Illustration 1-2 & 1-4.

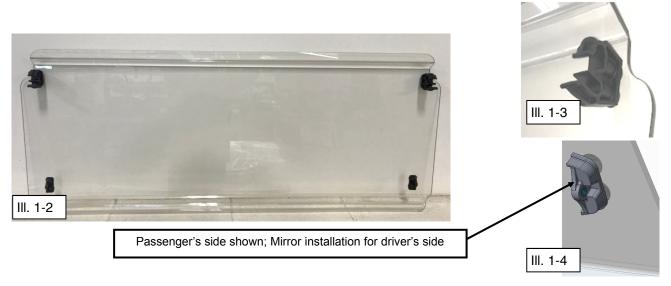


5. Assemble (2) Pivot Cylinders (Item 9) to (1) Clamp Assembly (Item 2) using (2) M6 x 38mm Button Head (Item 3) and (2) M6 lock Washers (Item 5). Tighten to specification. See Illustration 1-5.



- 6. Repeat Step #5 to create a second Pivot Cylinder/Clamp assembly.
- 7. Slide the (2) Pivot Cylinder / Clamp assemblies into position on the (2) Upper Pivots (Item 8) with the clamps outward from the upper pivot. See Illustration 1-6 & 1-7.



- 8. Assemble (1) Windshield Slider (Item 6) to (1) Lower Slider Mount (Item 10) using (1) M6 x 18mm Button Head (Item 3) on the passenger's side. Windshield Slider (Item 6) is to be positioned outside of the Lower Slider Mount (Item 10). Repeat for driver's side. See Illustration 1-6 & 1-8.
- 9. Assemble Clamp (Item 2) onto Windshield Slider (Item 6) using a T Knob (Item 7) on the passenger's side. The T knob should be positioned inside the Windshield slider. Repeat for driver's side. See Illustration 1-6 &1-8.

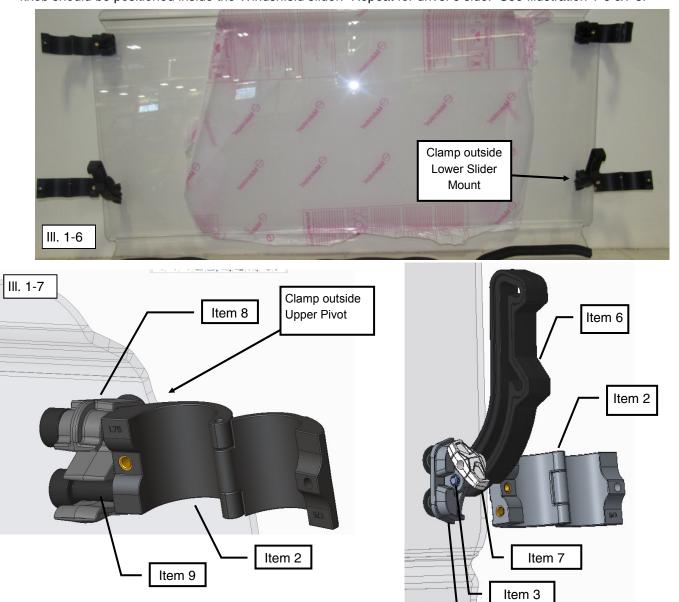


III. 1-8

Item 10

10. Ensure the clamps are open. With one person on the drivers side and one person on the passengers side, lift and position the Windshield assembly onto the ROPS with the bottom edge contacting the hood assembly. See Illustration 1-9.



- 11. Loosely assemble (4) M6 x 18 Button Heads (Item 3) connecting the male & female clamp parts (Item 2) around the ROPS. See Illustration 1-10 & 1-11.
- 12. Loosen the (2) T Knobs (Item 7) and open the Upper Windshield assembly to the maximum vent position and tighten the (2) T Knobs (Item 7). See Illustration 1-12.
- 13. Tighten to specification (4) M6 x 18mm Button Heads (Item 3) that connect the male & female clamp parts together (Item 2). Then tighten the (8) M6 x 18mm Button Heads (Item 3) that assemble the Upper Pivots (Item 8) and Lower Slider Mount (Item 10) to the Windshield (Item 1). See illustration 1-10, 11, & 12.









To Operate the Tilt Mechanism:


Loosen (without removing) the T Knobs (Item 7) and push on the Upper Windshield from the inside of the cab until
the desired position is reached. Tighten T knobs. Note: There are three positions on the Windshield Slider, Closed,
Half Open, and Fully Extended.

Note: Open positions are designed for low-speed operation ONLY. Windshield must be secured and in the closed position for high speed riding or transporting the vehicle.

To Remove the Upper Windshield (See Illustration 1-13):

- 1. Remove the T Knobs (Item 7).
- 2. Pivot the Upper Windshield until the windshield is horizontal.
- Push the Upper Windshield towards the cab gently to move the Upper Windshield Assembly ~1/2" on Upper Pivot.
- 4. Lift the Upper Windshield Assembly slightly to clear the Pivot Cylinders and remove the Upper Windshield Assembly from the vehicle.

Note: To reattach the Upper Windshield to the vehicle, follow the reverse order of Steps 4, 3, 2, 1.

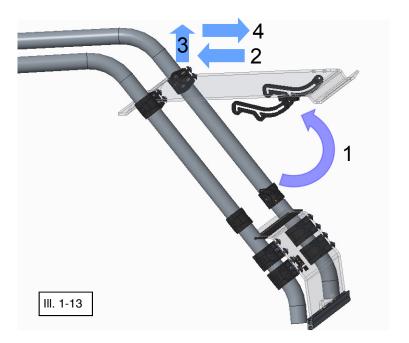

One Year Limited Warranty

For the period of one (1) year from the purchase date, Kolpin will replace for the original purchaser, free of charge, any part or parts found upon examination by Kolpin to be defective in material, workmanship, or both.

All transportation costs incurred submitting product to Kolpin for warranty consideration must be borne by the purchaser. If Kolpin determines that the product must be returned to the factory for credit, please call 1-877-956-5746 for a Return Merchandise Authorization (RMA) number and shipping instructions.

This warranty does not apply to parts that have been damaged by accident, alteration, abuse, improper maintenance, normal wear, or other causes beyond the manufacturer's control. In order to protect you and your ATV, certain parts of the accessory system and/or hardware are designed to fail when the equipment is over-stressed. Parts that are lost due to loosening and improper maintenance are not covered under warranty. This warranty does not cover removal or reinstallation labor fees of the plow system and related components.

Peripheral products such as engines, electric motors, and actuators may carry an original manufacturer's warranty. Most hardware is general in nature and is easily obtained locally. Be sure to replace with minimum metric class 8.8 specification.

7

REV 02